FOSCAM
www.foscam.com

CMS User Manual

CONTENTS

1 WELCOME 3
1.1Features 3
1.2 Minimum System Requirements 3
1.3 Software Installation 4
2 The software operation 5
2.1 Login and Exit the client 5
2.2 CMS User Interface 6
2.2.1 Status bar 7
2.2.2 Menu bar 7
2.2.3 Hierarchical management tree 8
2.2.4 Live view window 10
2.2.5 The device information list 12
2.2.6 Camera control panel 13
3 Configure the client 17
3.1 Add cameras to the client 17
3.2 Group Management 23
3.2.1 Add Group 23
3.2.2 Add cameras to one Group 24
3.3 Preview the group 25
3.3.1 Non-cyclical preview 26
3.3.2 Group switch 30
3.4 Parameter settings 30
3.4.1 Color 31
3.4.2 Video 32
3.4.3 Audio 33
3.4.4 OSD 33
3.4.5 Network 34
3.4.6 MD 34
3.4.7 Alarm in 36
3.4.8 PTZ 36
3.4.9 System 37
3.5 Record Management 38
3.6 Linkage alarm 40
3.7 User management 41
3.8 Other settings 44
4 Other settings about the client 46
4.1 Playback 46
4.1.1 Searching the records by time 47
4.1.2 Searching the records by file 48
4.2 EMap 50
4.2.1 Add the map 50
4.2.2 Edit the map 51
4.3 Logs 52
4.4 Logout user 53

4.5 Exit 53
5 OBTAINING TECHNICAL SUPPORT 53

1 WELCOME

FOSCAM offers the most comprehensive central management software IP Camera Client, designed for managing all FOSCAM H.264 IP Camera with numerous features.

It supports management hundreds of cameras for monitoring, recording, playback, and alarm management with ease-of-use and efficient control.

1.1Features

- Powerful function for hundreds of live views
- Convenient remote access via client
- Real-time 16 channel live viewing and simultaneous 4 channel playback
- Supports 256 Preset
- Efficient data backup, search, and export
- Intelligent PTZ remote camera control
- Supports two-way audio
- Supports Group Switch
- Supports Logs Management
- Motion detection activates alarm
- Multi-level users management with password protection
- Supports Map alarm
- Supports five alarm types: Motion Detection, Input Alarm, Lost Connect, Hard Disk Full, Hard Disk Error
- The Linkage Alarm has four types: Popup View Window, Electron Map Alarm, Linkage Record and Sound Alarm

1.2 Minimum System Requirements

PC: Pentium IV or above
CPU: 2.6G or above
RAM: 2.0G or above
Hard disk: 120G or above
Monitor: 1024x768 or higher resolution
VGA Type: Nvidia or ATI series
VGA Space: 256M or above
OS: Windows 2000**/** Windows XP/ Windows 2003/ Windows Vista/ Windows 7
Suggested OS: Windows XP

Note: The number of linked devices will depend on the network bandwidth and computer hardware configuration.

1.3 Software Installation

(1) Insert the CD in the CD drive of your computer. Open the CD; find the software per instructions;
(2) Double click H.264 Camera Client.exe and install the software.

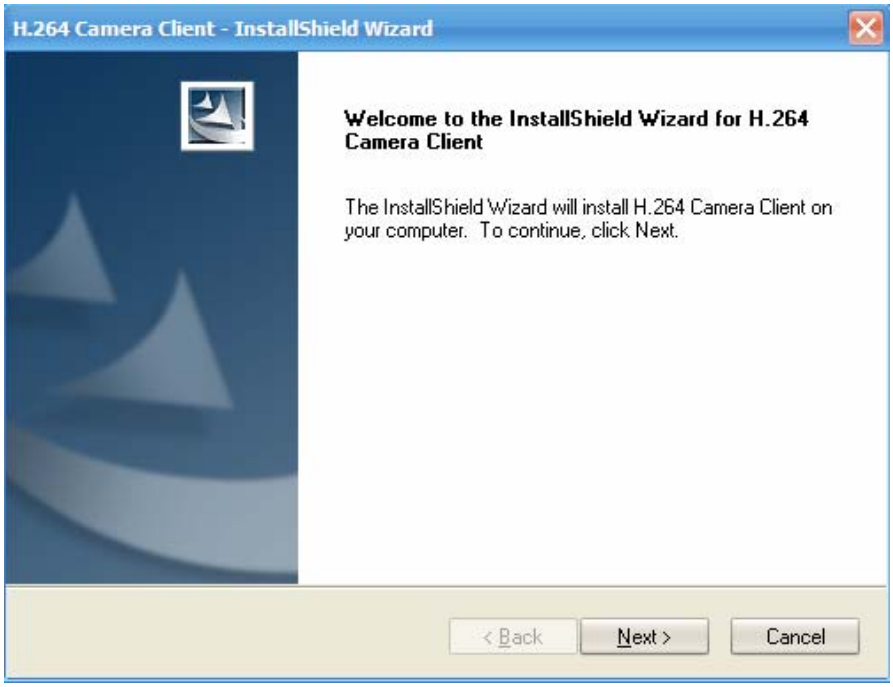
H.264 Camera Client - InstallShield Wizard
Welcome to the InstallShield Wizard for H.264 Camera Client
The InstallShield Wizard will install H.264 Camera Client on your computer. To continue, click Next.
< Back
Next >
Cancel

Figure 1.1

(3) Specify a location to install the program and click Next.

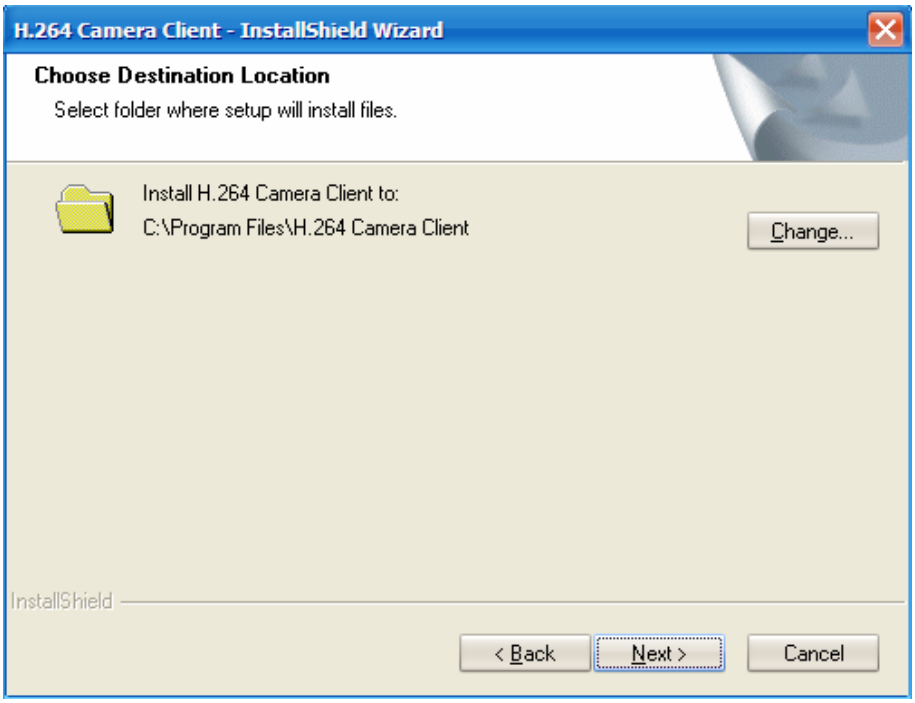

Figure 1.2

(4) Click Install to complete the software installation

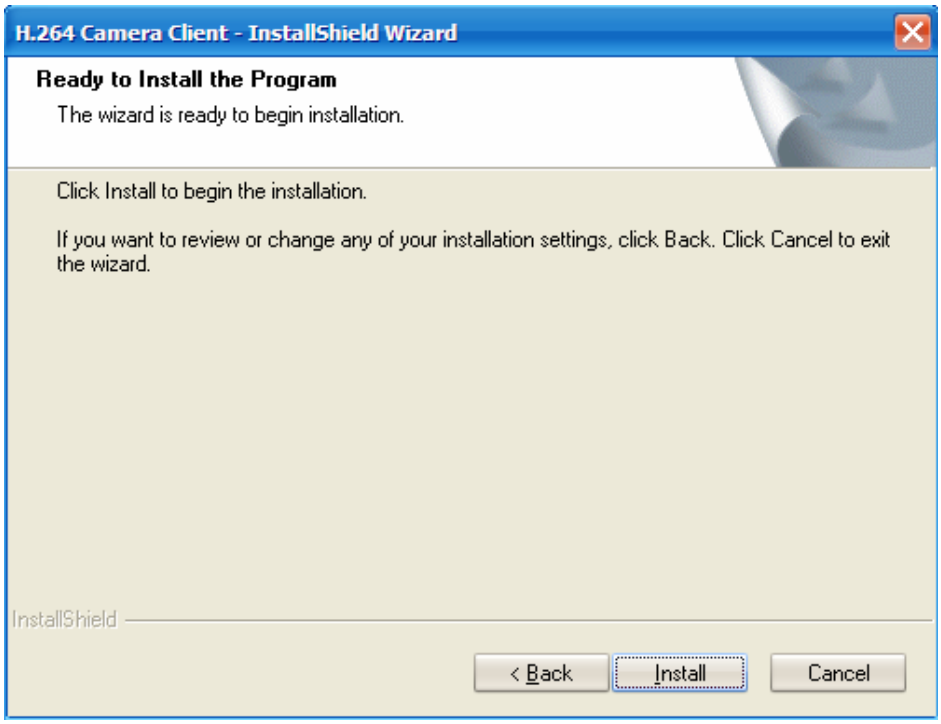
H.264 Camera Client - InstallShield Wizard
Ready to Install the Program
The wizard is ready to begin installation.
Click Install to begin the installation.
If you want to review or change any of your installation settings, click Back. Click Cancel to exit the wizard.
InstallShield
< Back
Install
Cancel

Figure 1.3

(5). An icon 

appears on the desktop automatically after a successful installation.

At the start program of PC, you can see the icon too.

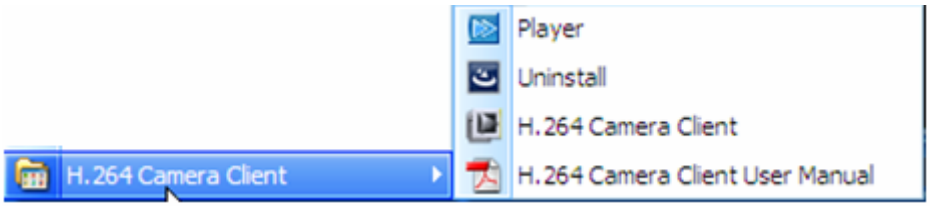

Figure 1.4

2 The software operation

2.1 Login and Exit the client

The software will run automatically after restart of computer. You can change it at "Config"---"Other Settings".

Double click the icon 

, you will see the login UI.

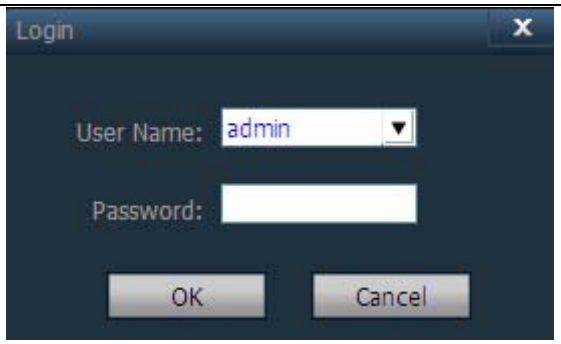

Figure 2.1

Login: The default user name is admin, no password. Click OK directly and you can see the following screen (Figure2.2).
Exit: When you exit the software, you should enter the user name and password, or else you can't exit the software.

Note: The client supports three-level permissions: admin, user and guest. Only the admin user can exit the client, other users can't exit it. Please reset the user name and password at first usage (For more details: see 3.7 chapter).

2.2 CMS User Interface

Login the client and you can see the following screen:

Figure 2.2

A— Status bar B— Menu bar
C—Hierarchical management tree
D---Camera control panel (PTZ/Preset/Cruise/Color)
E—Live view window F— Event window

2.2.1 Status bar

When you experience some issues and you want to see the user manual, click here.

Hide the client

Exit the client

2.2.2 Menu bar

The LOGO of the software

Click it and back to the preview screen

Click it and back to the playback screen

Click it and back to the Emap screen

Click it and back to Configure screen

Click it and back to the LOGS screen

Log off and switch users

Exit the client

Status Panel

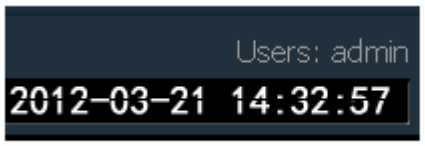

User name
Current time (yyyy-mm-dd hh-mm-ss)

2.2.3 Hierarchical management tree

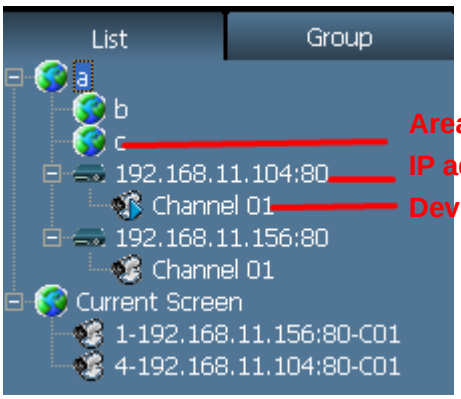

If you have added cameras to the client (read 3.1 chapter about how to add cameras to the client), you can see the device tree like the following screen:

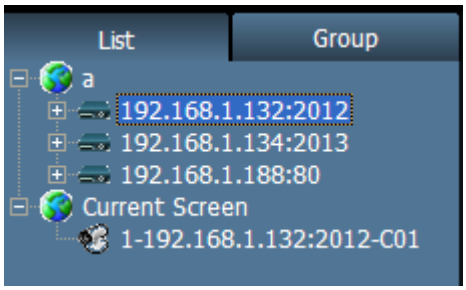

Figure 2.3

There are two modes: List and Group.

List: You can see all cameras that have added to the client and which area they belong to. Such as the picture above, 192.168.132:2012 belongs to “a” area. Click before the device IP, you can see the device channel. And the tag changes to.

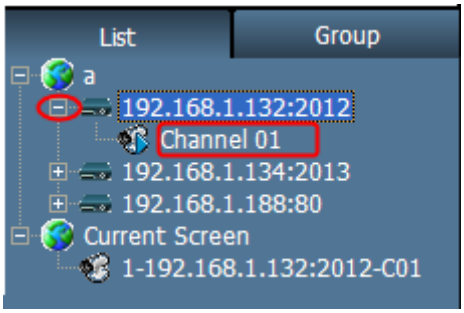

Figure 2.4

You can see a icon before the Channel. The icon has three statuses:

: This status shows that the device has connected successfully and you can see the live view window.

This status shows that the device has added to one area but not connect.

This status shows that the camera is alarming.

Current Screen: Displays the current connected devices, only under the list mode.

Group: Display the group information Make sure you have configured the Group (read 3.2 chapter about how to configure Group).

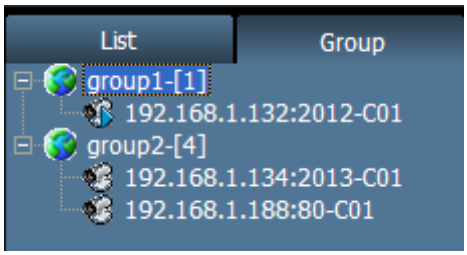

Figure 2.5

2.2.4 Live view window

Add cameras to the client and back to the device list, double click the device channel then you can monitor the camera, such as the picture below:

Figure 2.6

Magnifier. Click this button then drag the left button of the mouse on the view, the area can be amplified. Click this button again, stop the function.

Select one connected video by clicking on the view. Click the button and you can see the icon at the connected video. Then talk to the camera by the microphone that connected with PC. People around the camera can hear your voice (the camera must have some audio output device such as the speakers).Click the icon again, people can't here your voice and the icon disappeared.

Figure 2.7

Note: You can only talk to one camera one time.

Select one connected video, adjust the audio volume of the current video(mute) and you can hear the sound around cameras. Make sure you have opened the audio and adjusted the volume. You can monitor many videos at the same time.

Select one connected video, click this icon and start recording. You can see a red icon at the video. Click it again, the camera will stop recording and the icon will disappear.

Figure 2.8

Select one connected video, click the icon and the client will capture the living picture automatically. If you click the capture button many times at a short time, the client can capture a maximum of 2 pictures at one second. Please set the storage path at " Config-Other Settings".

Select one connected video, click the icon and you can see the files that stored at the SD

card of the camera.

The client can monitor many cameras at one page, click the icon and choose the display number. For example, click four pic, you can see the following picture.

Figure 2.9

Click the icon, the client will be full-screen. Click ESC and exit the full-screen.

Click last page to preview the videos of last page.

Click next page to preview the videos of next page.

NOTE: Make sure you must have set groups for the client and click start group switch before clicking last/next page.

If you have set group, click this icon, you can see the page shown one by one. Click the icon again and stop group switch. (read 3.2 chapter about how to configure Group)

Click it and the camera list will be contracted or extended.

Click it and the device information list will be contracted or extended.

2.2.5 The device information list

Some information about the cameras, such as the alarm information, the connect information and so on.

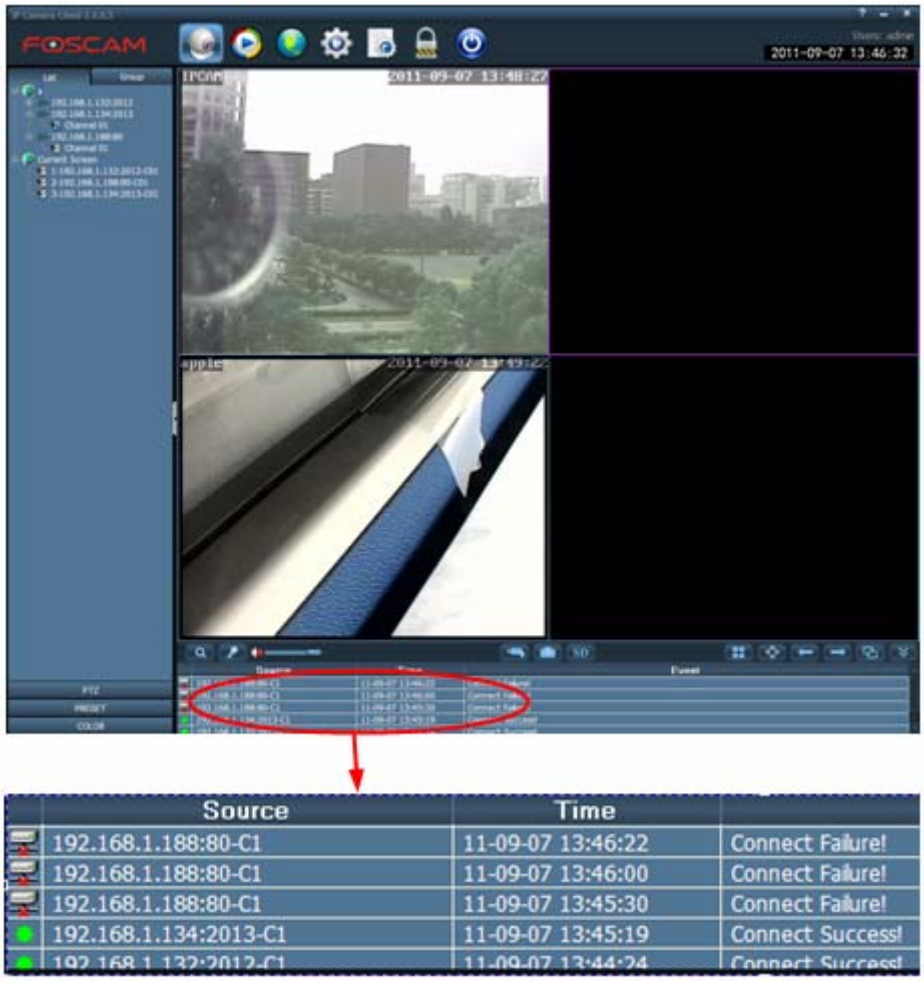

Figure 2.10

2.2.6 Camera control panel

1) Pan/Tilt/ Zoom (PTZ) control panel

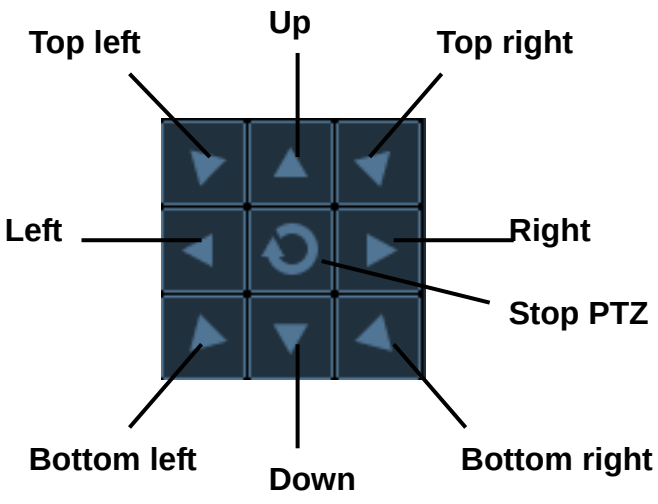

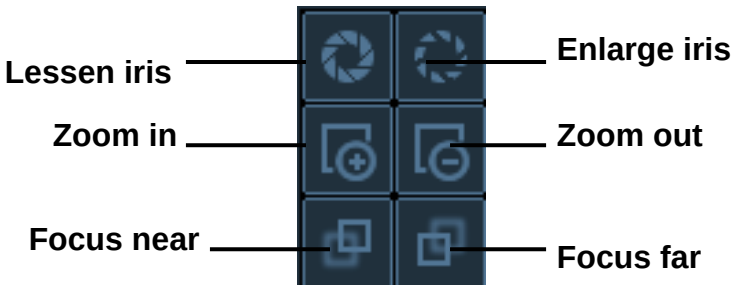

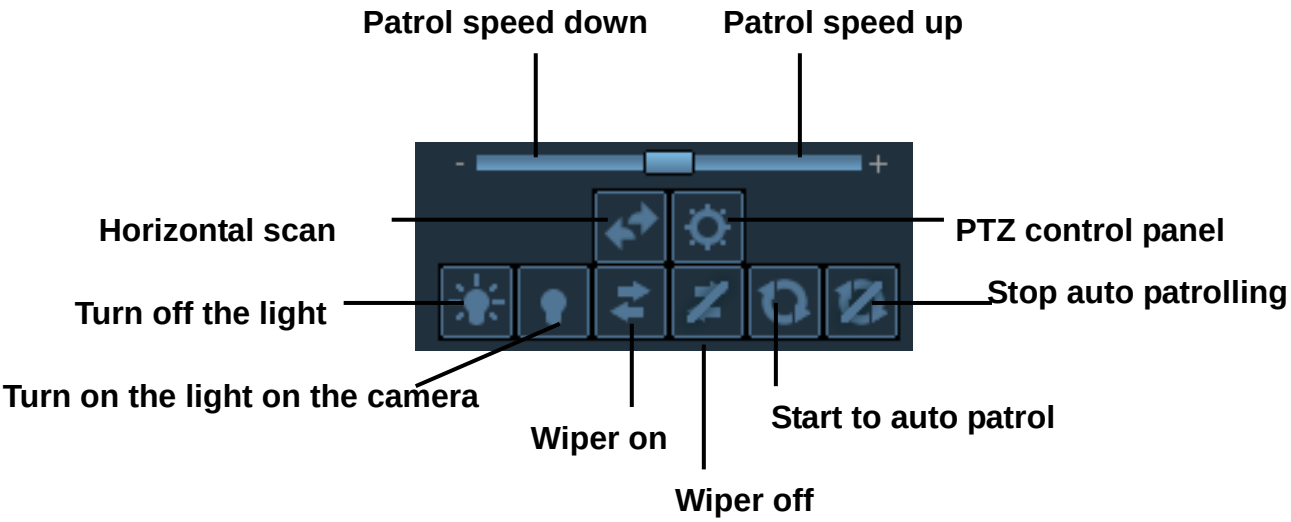

Figure 2.11

Click the icon , it will pop up the following screen:

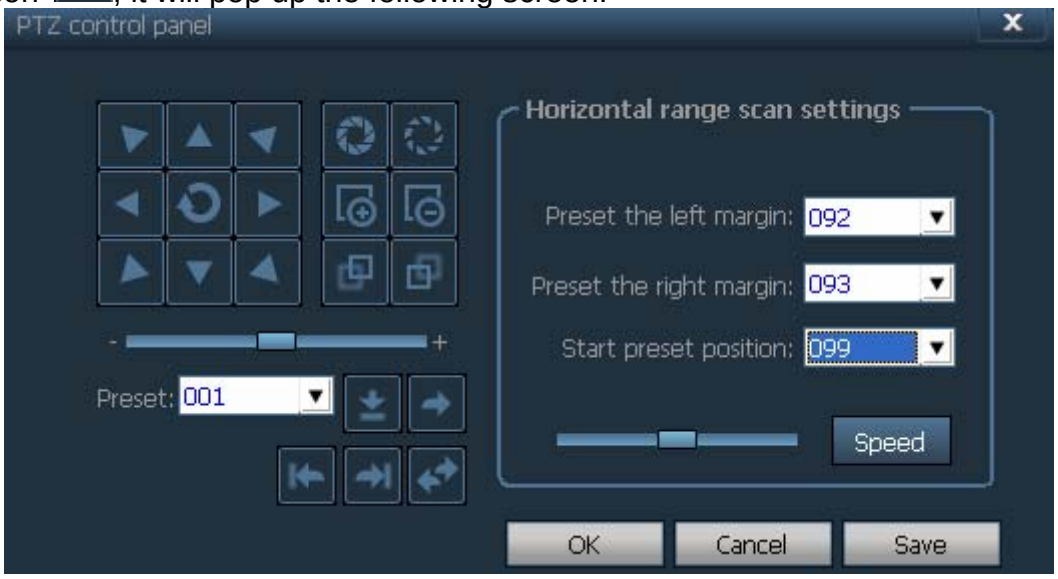

Figure 2.12

Choose one preset position for the left margin, select another for the right margin and preset position, adjust the rotate speed, click OK to save the settings. When you start the horizontal scan, the camera will scan from the Start preset position, and scan between the left margin and the right margin.

2) Preset

On this page, you can create preset positions for the camera to go to directly or patrol consecutively from one position to another. A total of 256 preset positions can be configured.

Please follow the steps below to create preset positions:

1 Select one connected camera

2 Choose one preset number.

Figure 2.13

3 Adjust the shooting area to a desired position using the PTZ control panel.

4 Click Set to define your home position.

5 To add additional preset positions, please repeat set 1~3.

6 To remove a preset position, select the preset NO. , then click Del.

7 If you want to go to one preset NO., select the NO. and then click Goto.

3) Cruise

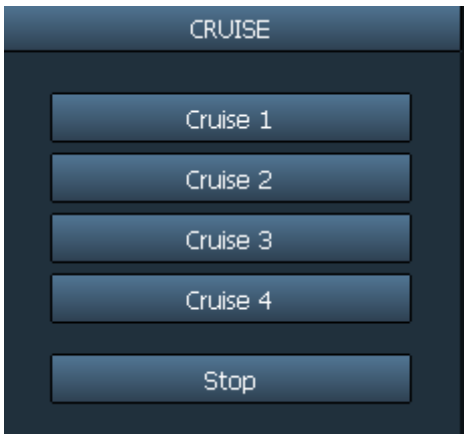

Figure 2.14

This panel has the same function as the preset position.

Firstly, back to “Config”-“Other Settings”, here you can set cruise.

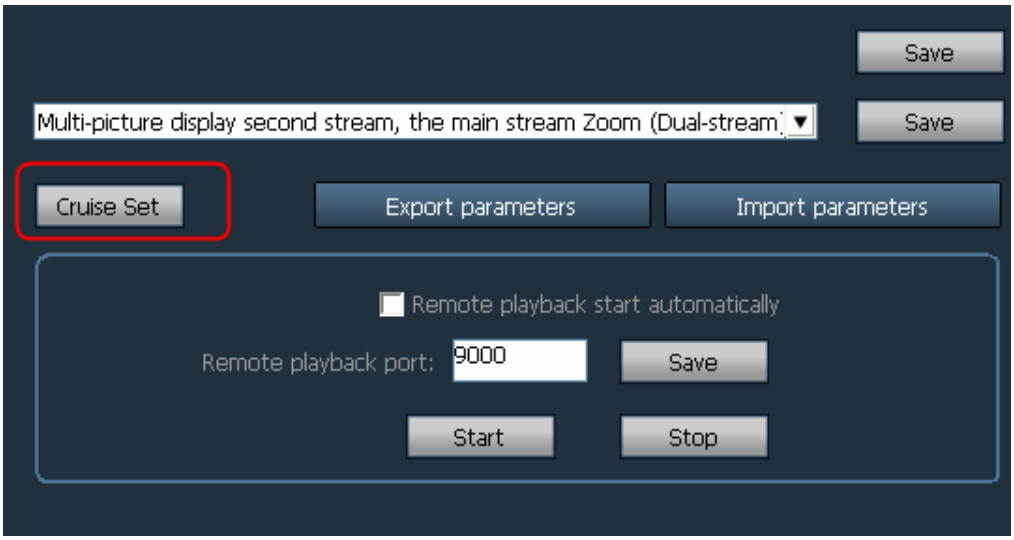

Figure 2.15

After set Cruise for one camera, when you click Cruise 1, the camera will cruise to the preset position you set. It has the same effect as you click the preset position on the PTZ panel.

4) Color

Brightness, contrast, hue and saturation are used to adjust the quality of the video.

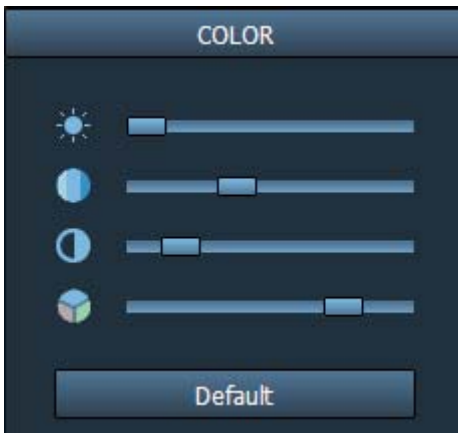

Figure 2.16

Select one connected camera by clicking the camera live window, and adjust the parameters, Click default and the camera will restore the factory default.

3 Configure the client

Before using the software, you need configure and add devices to the client. Click the icon and come to the device management UI.

3.1 Add cameras to the client

The default Camera list tree is null, you need to add Area first then add cameras to the area.

3.1.1 Add area

Area is a efficient for managing many cameras. Such as the following picture:

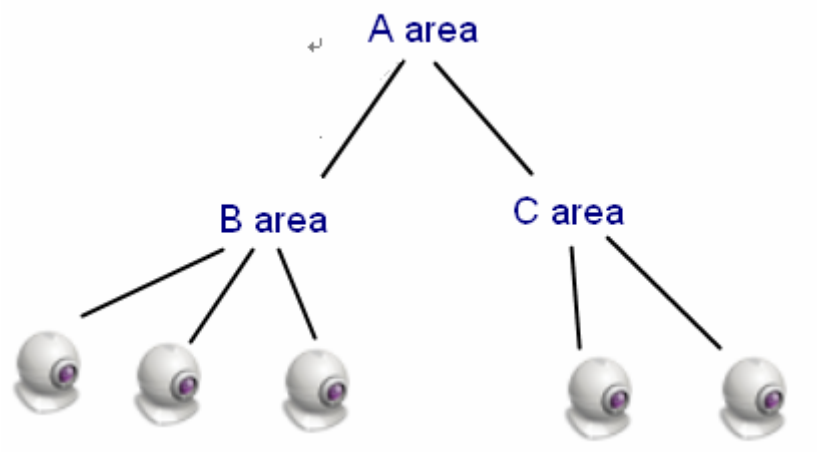

When one camera has been detected and

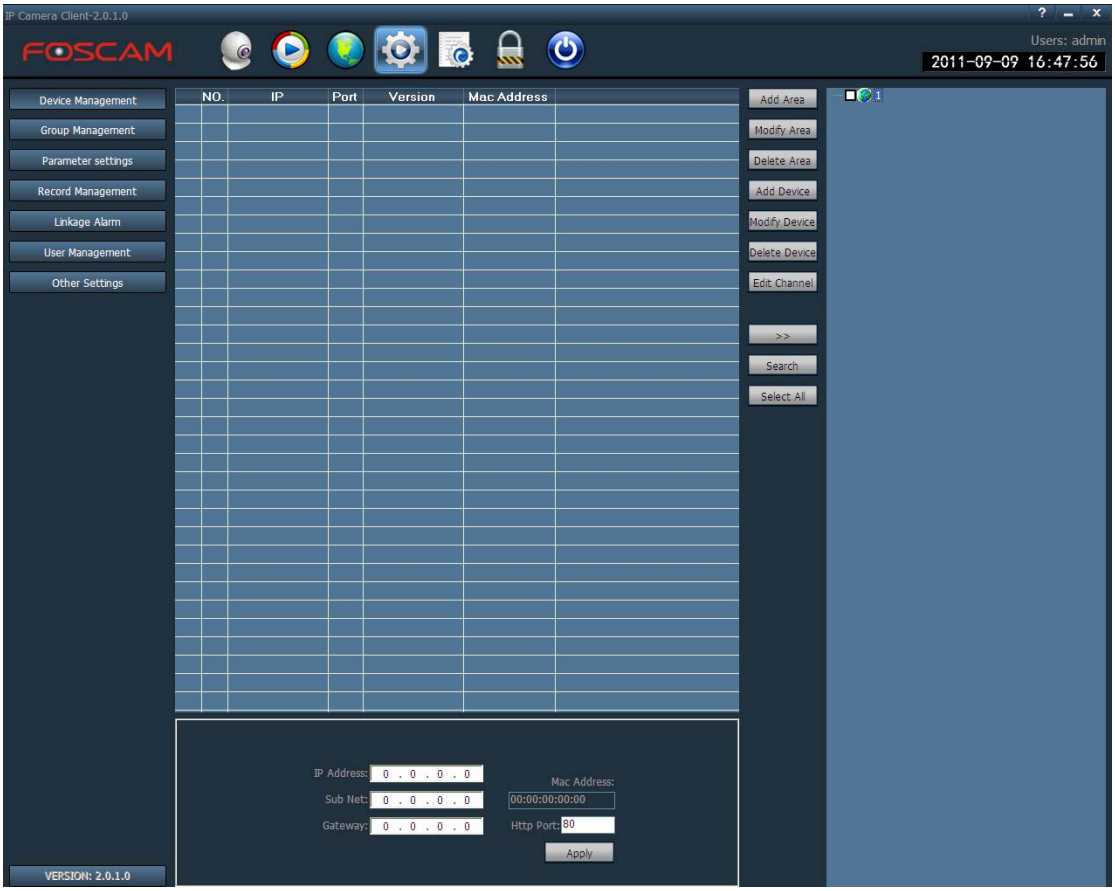

Figure 3.1

The default device list is null, you need add the Area first and then add cameras to the Area. Click Add Area, you will see a dialog box. Enter the area name and click OK.

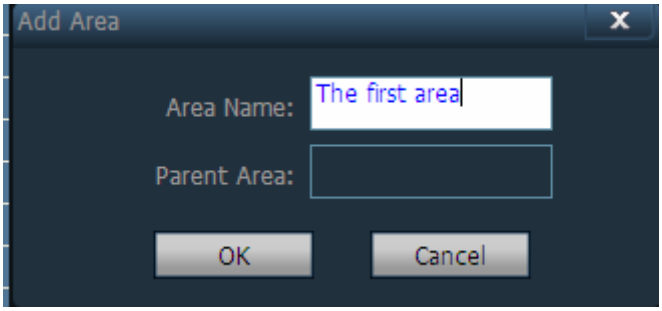

Figure 3.2

The first area does not have the parent area. You can add up to 128 areas.



: Add area to the device list.

Select one existent area and then modify the area name.



Select one existent area and then delete it. The last one area cannot contain any cameras, or else you cannot delete it.

3.1.2 Add device

1) Add cameras on the LAN

Please follow the steps below to add cameras to a area.

Step 1: Click Search Search button to detect all FOSCAM H.264 network cameras on the LAN.

Figure 3.3

Step 2: Select one existent area by clicking the area name.

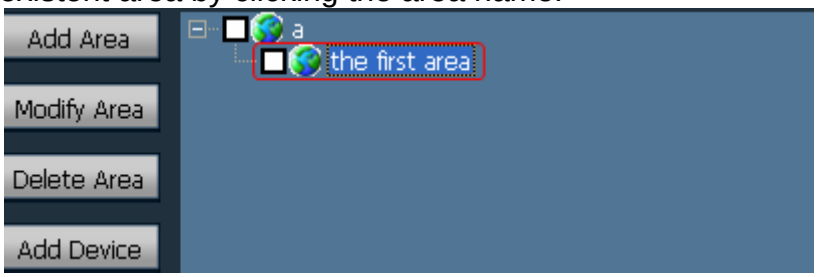

Figure 3.4

Step 3: Select the checkbox before the LAN IP and click the button >>, you will see the camera LAN IP under the area name.

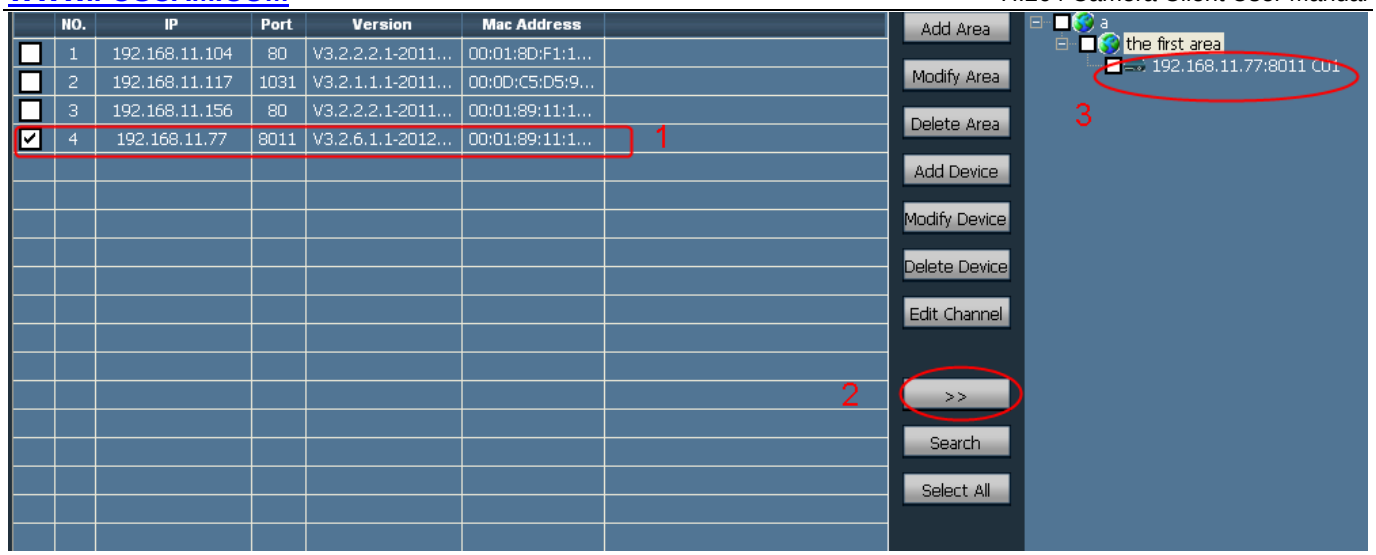

Figure 3.5

If you want to add all cameras to one area, click Select All button and add cameras.

2) Add cameras on the WAN

Make sure the camera you want to add can be accessed by WAN IP or domain name in web browser.

Click Add Device button and it will pop up the following screen.

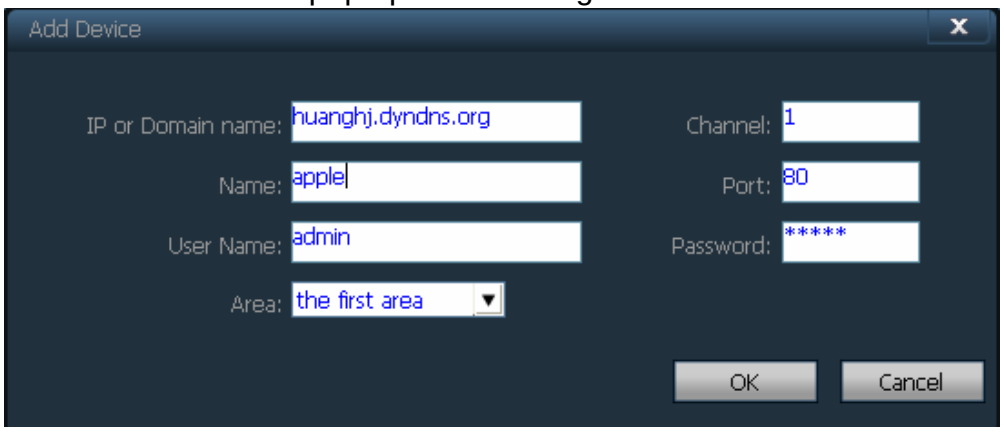

Figure 3.6

IP or Domain Name: WAN IP or domain name of the added camera.

Channel: If the camera has many channels, you can choose one. But the current cameras only have one channel. You had better not change it.

Name: The alias of the added camera. After you have added the camera then back to the preview window, you can only see the name but not the device IP.

Figure 3.7

Port: The HTTP port of the camera.
User name: The login username of the camera. The default username is admin.
Password: The login password of the camera. The default password is admin.
Area: The area that the camera belongs to.

Fill in the above information, click OK and you can see the camera has been added to the area you set.

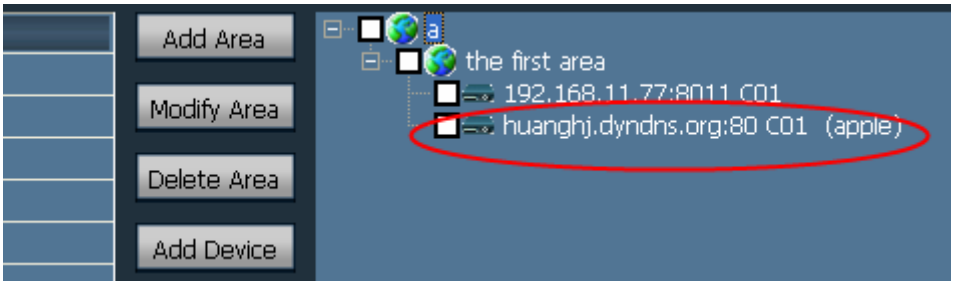

Figure 3.8

3) Modify the added device

Please follow the steps below to add cameras to a area.
Step 1: Select one added device.

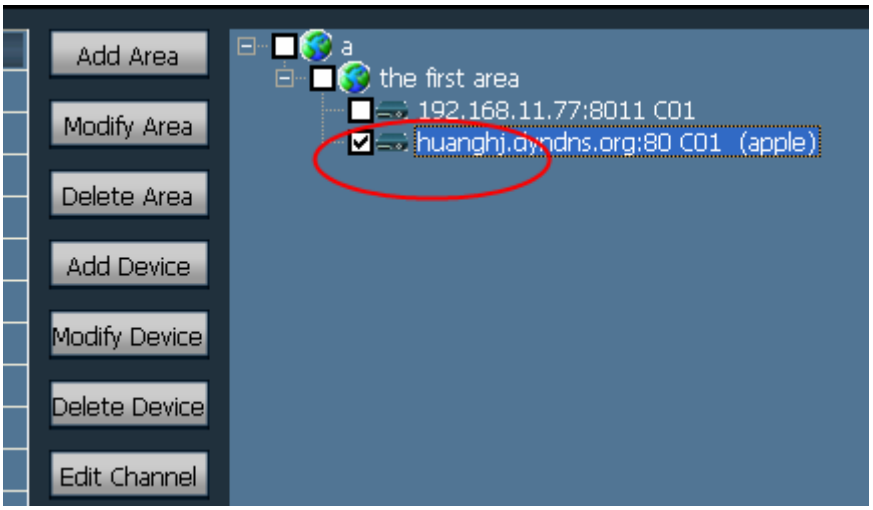

Figure 3.9

Step 2: Click Modify Device button and the client pop up the following screen:

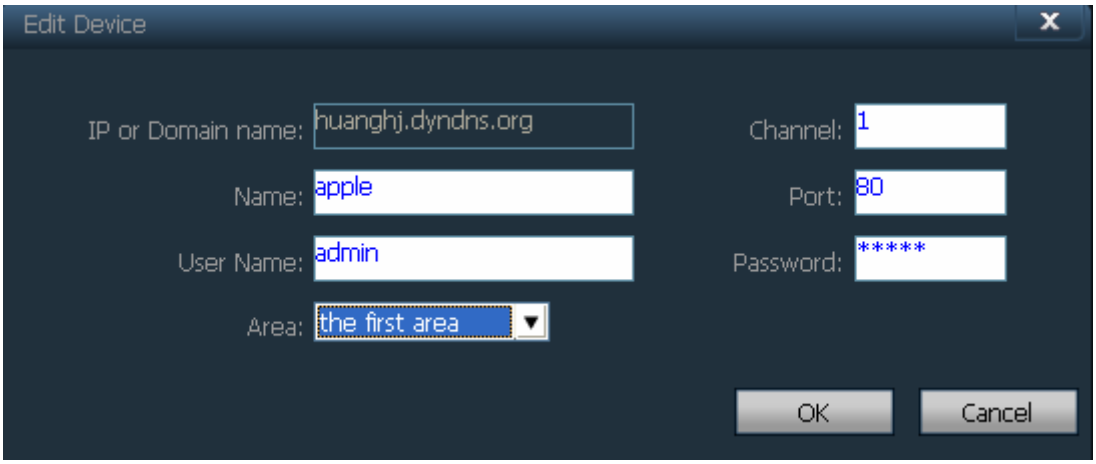

Figure 3.10

You can change the Name, Port, User name and password, the belonged area at this window. Make sure the camera can be accessed by the IE browser after changing.

Step 3: Click OK and all settings take effect.

4) Other settings

In the camera searched list, you can change the camera's LAN IP and Port.

Select the checkbox before the camera's LAN IP and you can see the camera's basic information. Here you can change the IP Address, Sub Net, Gateway and Http Port.
Click Apply to save the settings. And the camera will restart. During the restart, the client and IP Camera Tool cannot search the camera.

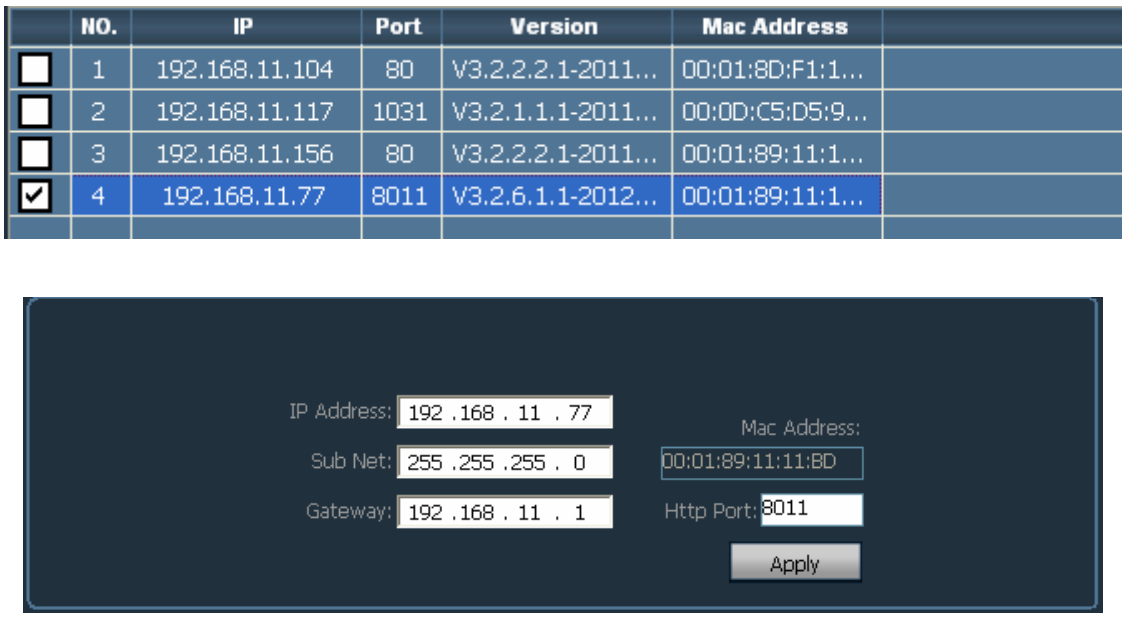

Figure 3.1

Note: Make sure the camera shares the same Sub Net with your computer, or else the client cannot search the camera again after restart.

Edit Channel : If the cameras support many channel, you can change the channel to another, but for H.264 camera, it has only one channel, so it has no effect when you changed the channel.

3.2 Group Management

The live view window will showed one by one automatically if you set Group successfully.

3.2.1 Add Group

Add Group

Add groups to the client.

Click the icon Add Group and it will pop up a dialog box, enter the group name. Choose the split number for one group, you can choose any one: One Pic /Four Pic/Six Pic/Eight Pic/Nine Pic/Sixteen Pic.

The client supports up to twenty groups..

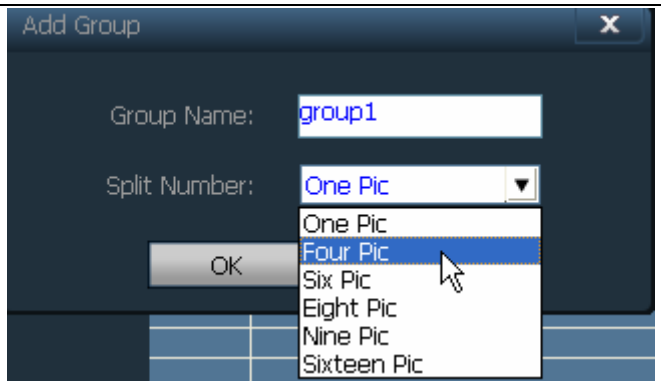

Figure 3.12

Edit Group

Change the Group name and Split number.

Select one existent group and then click this icon 

. It will pop up the following screen:

Figure 3.13

Here you can alter the group name and split number, click OK to save the settings.

Select one group, click the icon and delete it.

3.2.2 Add cameras to one Group

Select one group, click the before the device IP or camera name, and then click the channel number, finally click

and add the channel to the group.

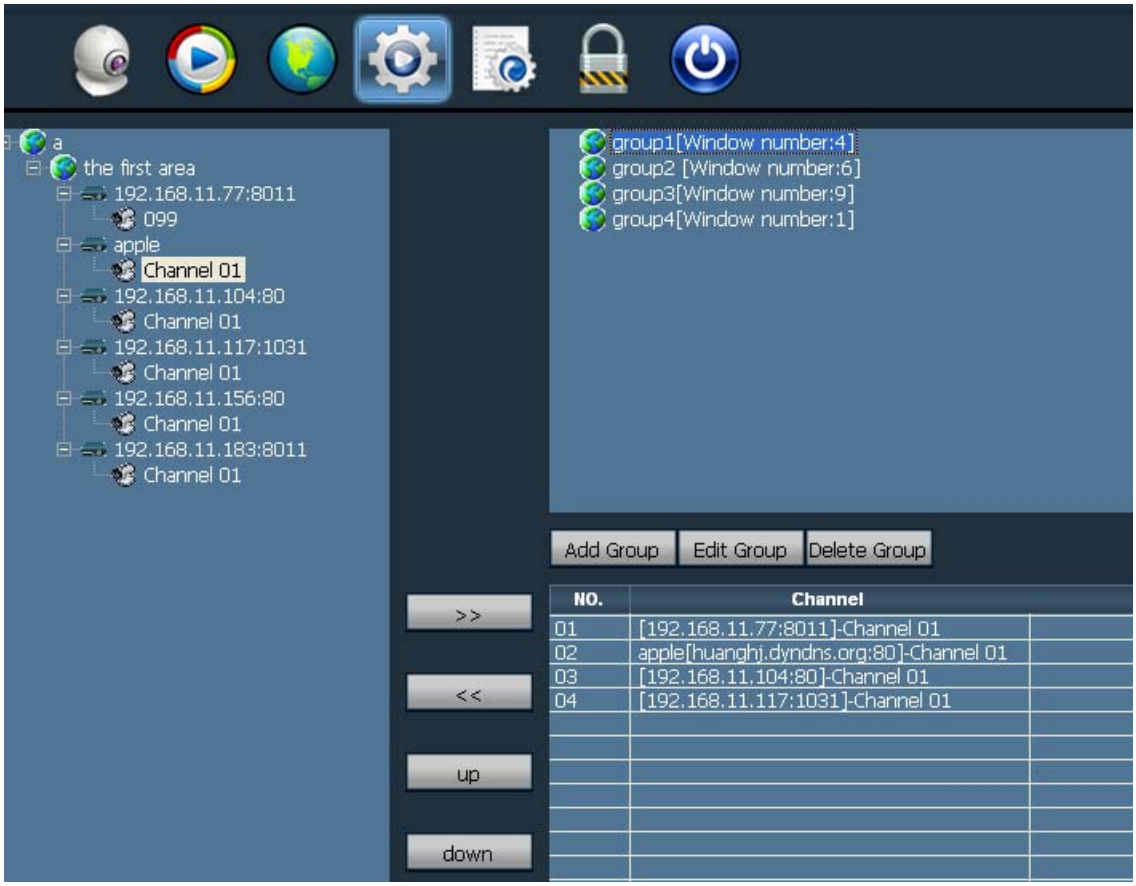

Figure 3.14

 Add the camera channel to one group.

Remove one camera channel form one group

 Adjust the display order of the camera in one group. The selected device will change position with fore device.

 Adjust the display order of the camera in one group. The selected device will change position with latter device.

Note: One camera can be only added one time.

3.3 Preview the group

Click the icon and back to the live view window. The default display mode of the client is the camera list mode. Click the “list” or “group” and you can exchange the list or group information. The default display Pic is four. The biggest Pic is sixteen.

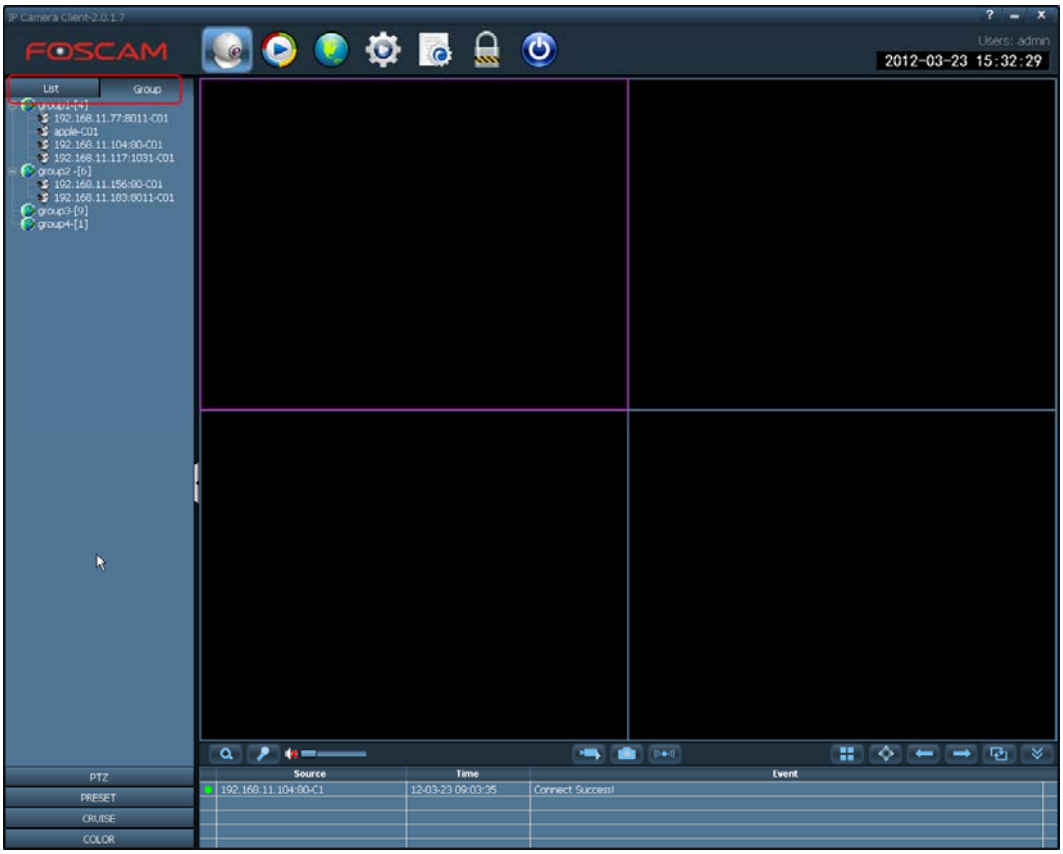

Figure 3.15

3.3.1 Non-cyclical preview

Click the "+" before the device IP or double click the IP address, you can see the channel of the device.

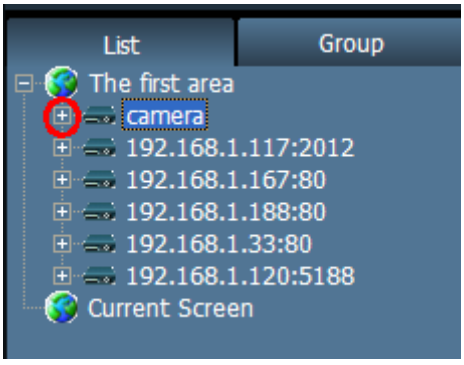

Figure 3.16

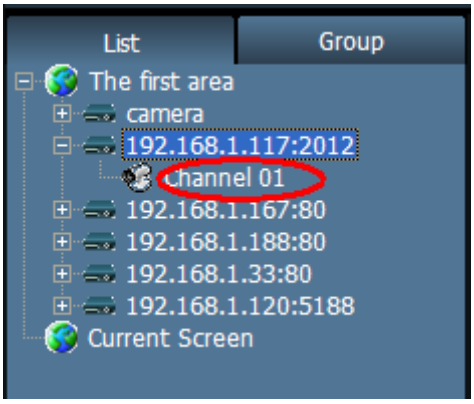

Figure 3.17

Double click the channel or drag it to the view window, the camera can be previewed.

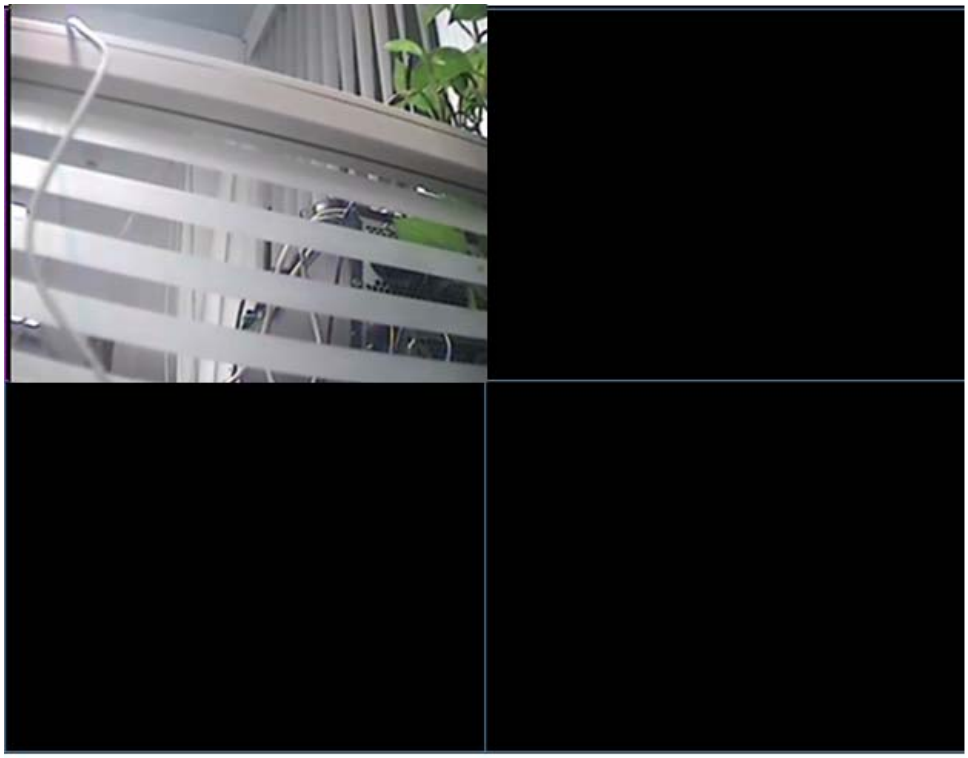

Figure 3.18

If the device has connected successfully, you can see this icon before the channel. I f you see this icon that shows the device connect failed. This icon shows the camera is alarming.

You can see the information about the camera connection under the live view window..

	Source	Time	
	192.168.1.117:2012-C1	11-08-20 09:59:08	Connect Success!

Figure 3.19

Right click on the area name, you can see a menu.

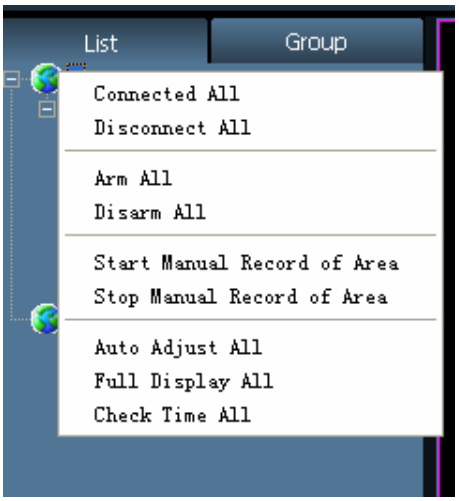

Figure 3.20

Connected all: Connect all devices of the area.
Disconnect all: Disconnect all devices of the area.
Arm all: All devices of the area will alarm when they are detected.
Diarm all: All devices of the area will not alarm even they are detected.
Start manual record of area: All devices of the area will record at the same time. Select the option, you can see the record icon at each live view window of the area. The default storage path is D disk.
Stop manual record of area: Stop recording of the area.
Auto Adjust All: All devices of the selected area will adjust the display proportion automatically.
Full display all: All devices of the selected area will display the view base on the split screen size.
Check time all: The time of All devices at the selected area will sync with PC.

Right click on the IP address, you will see the following screen:

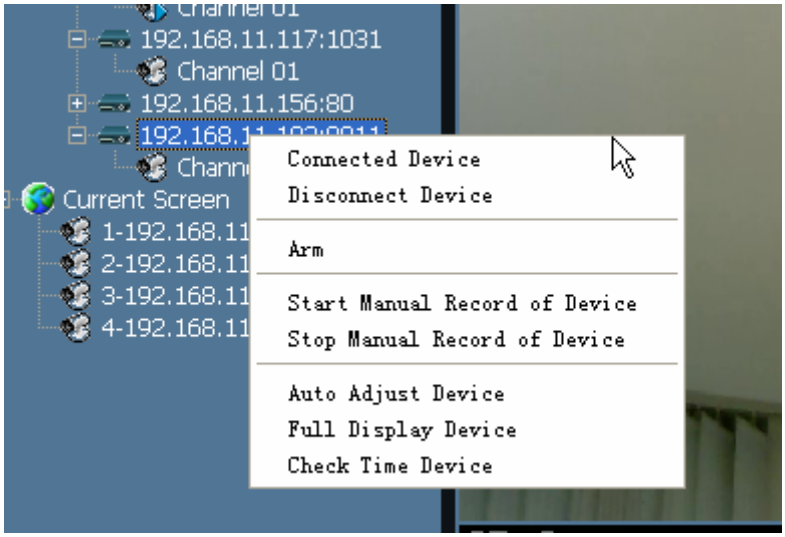

Figure 3.21

Connected device: The channel of the device will be connected.
Disconnect device: The channel of the device will be disconnected.
Arm: The camera will arm when it is detected.

Start/stop manual record of device: The selected device will start or stop recording manually.
Auto adjust device: The selected camera will adjust the display proportion automatically.
Full display device: The device will display the view base on the split screen size.
Check time device: The time of the camera will sync with PC.

Select one channel and right click, you can see the following screen:

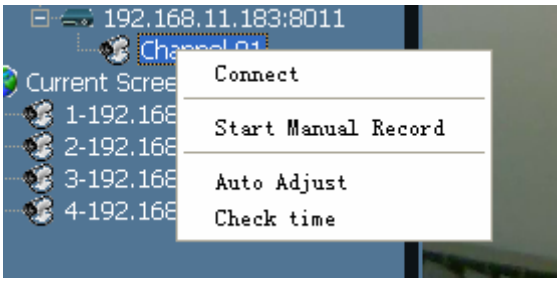

Figure 3.22

Select one live view window and right click, you can see the following screen:

Figure 3.23

Full screen: Select it and the client will be full-screen. If you want one view shows full-screen, you need double click the view again. Press ECS and exit the full-screen.
Auto Adjust: Select it and the camera will adjust the display proportion automatically.
Photo: Select it and the client will snap a picture.
Record: Select it and the camera will start recording and the default storage path is D disk.
Stop display: Stop displaying the view. After you select it, the status of the camera is connected. If you want to display the view again, you need drag the channel of the camera again.

3.3.2 **Group switch**

Switch to the group window, if you have configured group you can use the group switch button (if you don't know how to configure group please read Group management.).

Click the switch button , start the group switch and the switch button will change to .

You can click the next/past page to view the group. Click the button and stop switch.

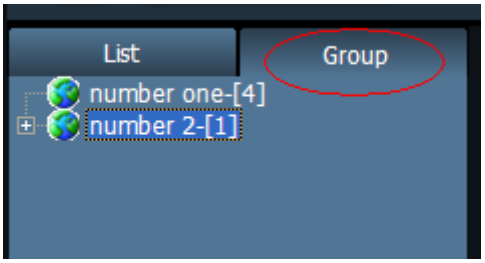

Figure 3.24

Note: You can set the switch time in "Configure---Record management". The default switch time is 5 seconds.

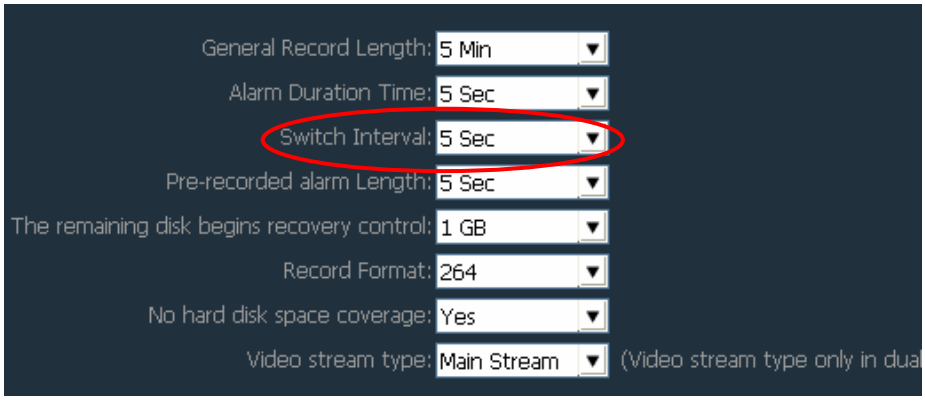
General Record Length: 5 Min
Alarm Duration Time: 5 Sec
Switch Interval: 5 Sec
Pre-recorded alarm Length: 5 Sec
The remaining disk begins recovery control: 1 GB
Record Format: 264
No hard disk space coverage: Yes
Video stream type: Main Stream
(Video stream type only in dual

Figure 3.25

3.4 Parameter settings

Adjust the parameters of the connected camera.

You should connect the camera that you want to change the parameters by double click the device channel in parameter settings page. Then you can see the view window.

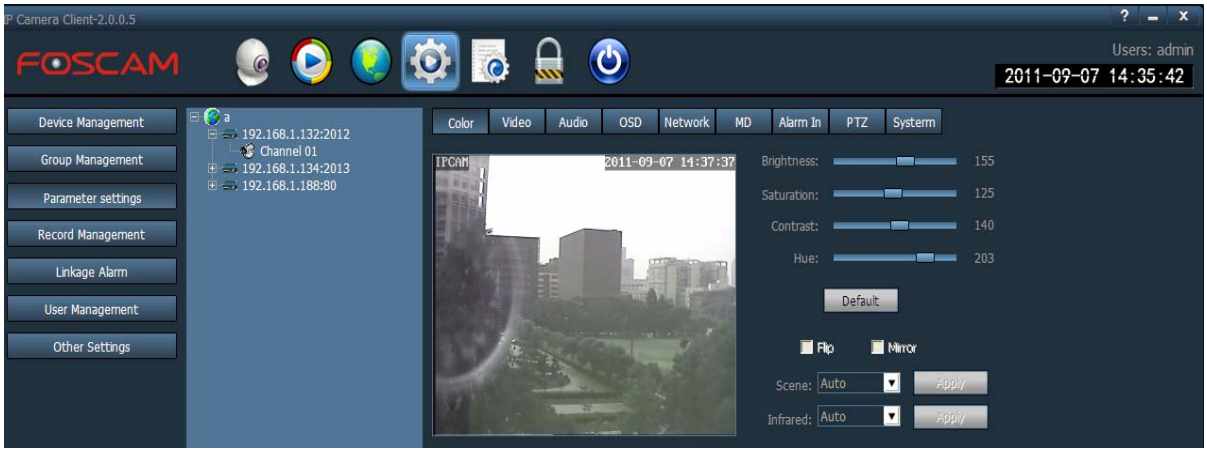

Figure 3.26

3.4.1 Color

Adjust the quality of the video by setting the image parameters.

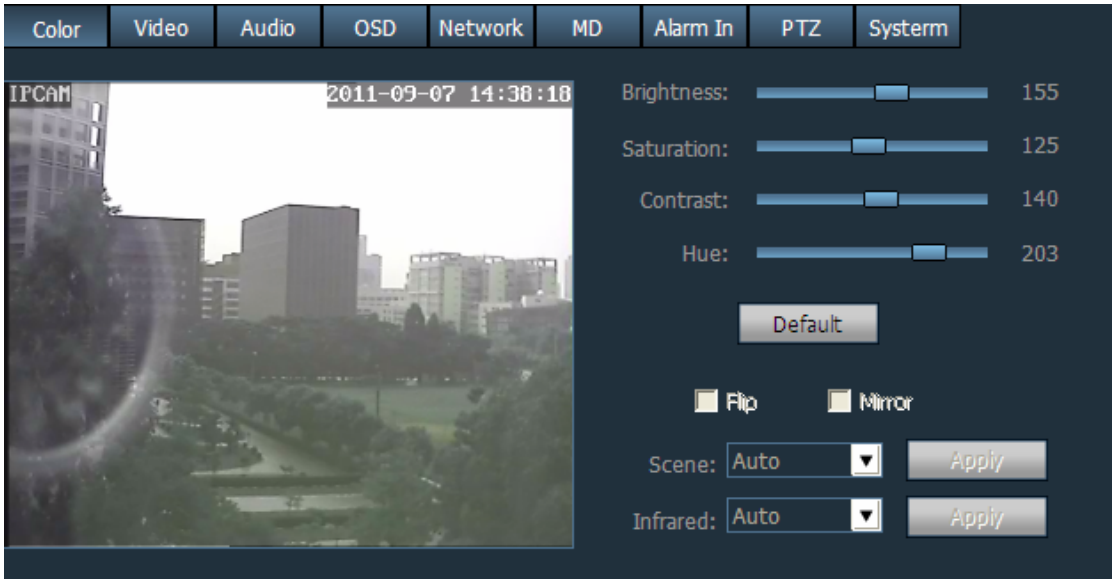

Figure 3.27

Brightness,saturation,cantrast and hue will restore the factory default if you click Default.

Flip & Mirror: You can choose flip or mirror if you set up the camera to show a reverse image. Make sure the camera supports the function.

Scene: There are three modes. (Auto, indoor and outdoor). The default mode is auto. Make sure the camera supports the function.

Infrared: There are two modes.(Auto and manual). The default mode is auto. Make sure the camera supports the function.

Note: Make sure the camera supports Flip, Mirror, Scene and Infrared If you want to use these function.

3.4.2 Video

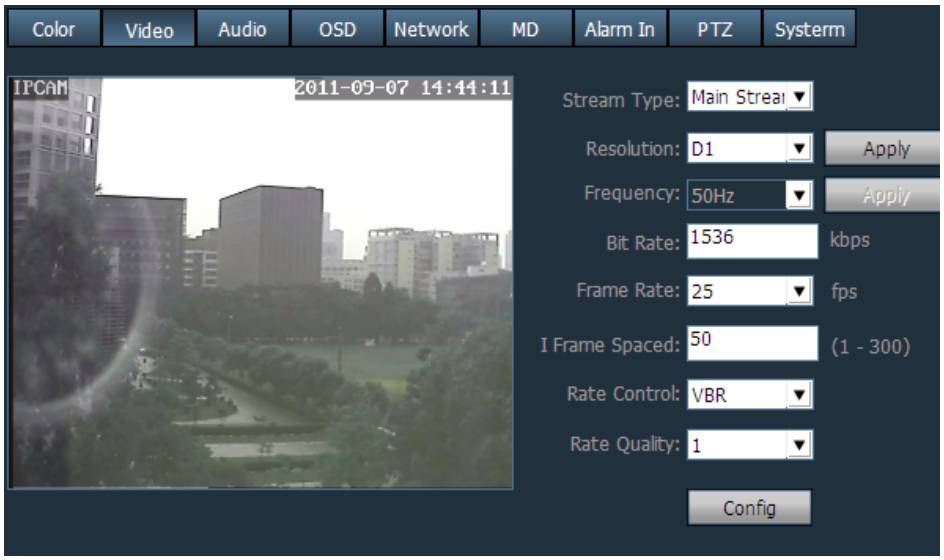

Figure 3.28

Stream Type: There are two types: Main stream and sub stream.
Resolution: Different camera has different resolution.
Frequency: There are two types: 50HZ and 60HZ. The default type is 50HZ.

Bit rate: Generally speaking, the larger the bit rate is, the clearer video will become. But the bit rate configuration should combine well with the network bandwidth. When the bandwidth is very narrow, and bit rate is large, that will lead to video can not play well.

Frame rate: When the camera format is PAL, the maximum frame rate is 25 fps. When the video format is NTSC, the maximum frame rate is 30 fps.

1 Frame spaced: The interval between two frames.

Rate control: It has two models: CBR and VBR. If you choose CVR, video encoder will be coding on the basis of bit rate you set. If you choose VBR, video encoder will be coding not only on the basis of bit rate, but also consider video quality.

Rate quality: It has six grades. The smaller the grade, the better the quality will become.

3.4.3 Audio

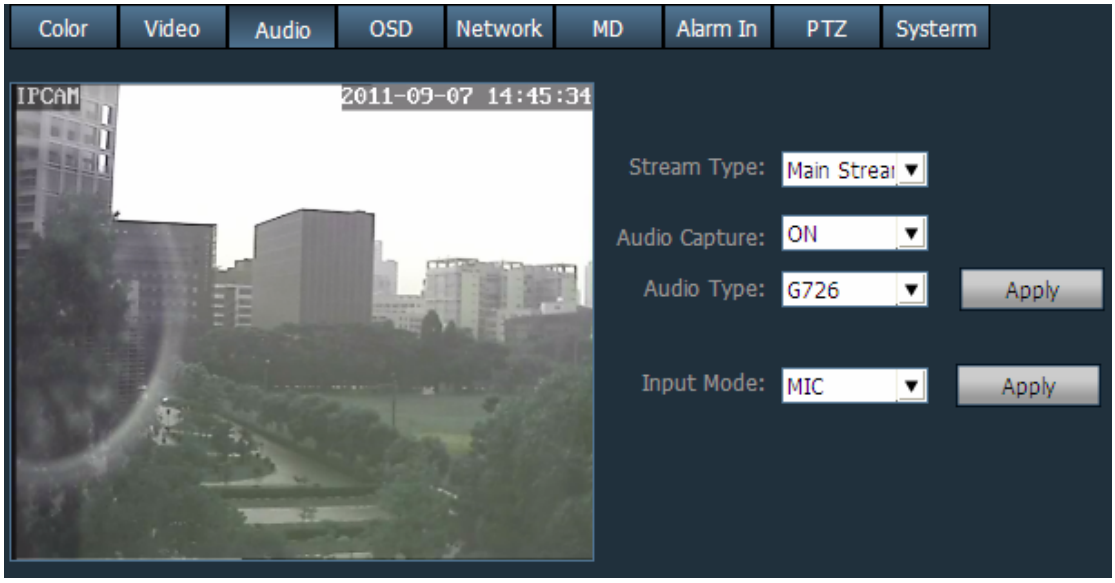

Figure 3.29

Stream type: Main stream or sub stream.
Audio capture: On or off. You had better choose on and the audio will be better.
Audio type: G711, G726.
Input Mode: Mic or line in. If the camera has connected with microphone, here you should choose MIC.If the camera has connected with linear audio input signal device, here you should **choose Line in.** Which one you choose is decided by the device that connect with camera.

3.4.4 OSD

Add name and time on the video.

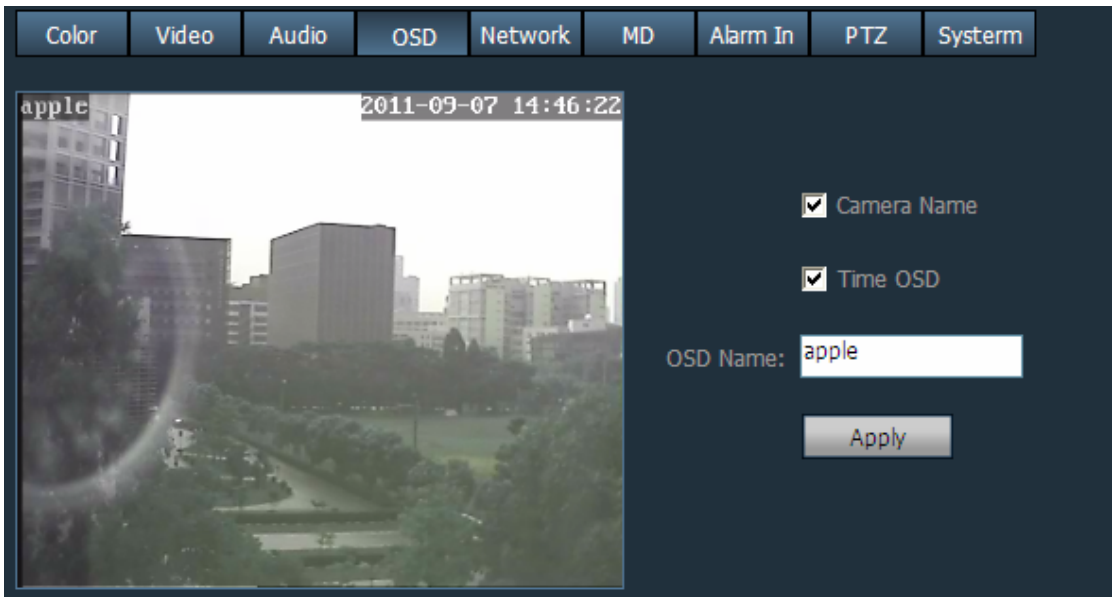

Figure 3.30

Click Apply after finishing all settings.

3.4.5 Network

Configure the network of the camera. Click apply after finishing all settings.

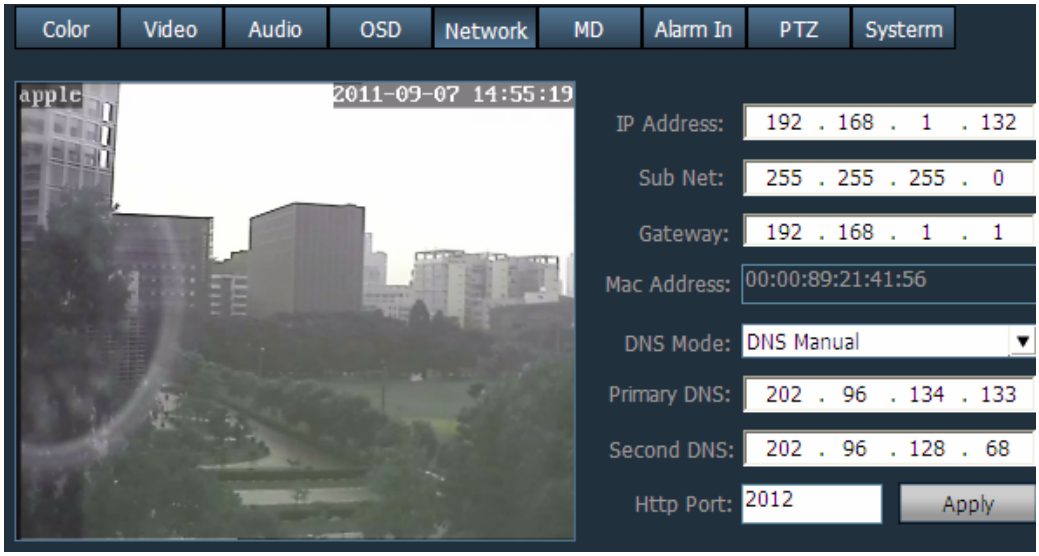

Figure 3.31

3.4.6 MD

If the user wants to monitor a special region, he should select motion detection.

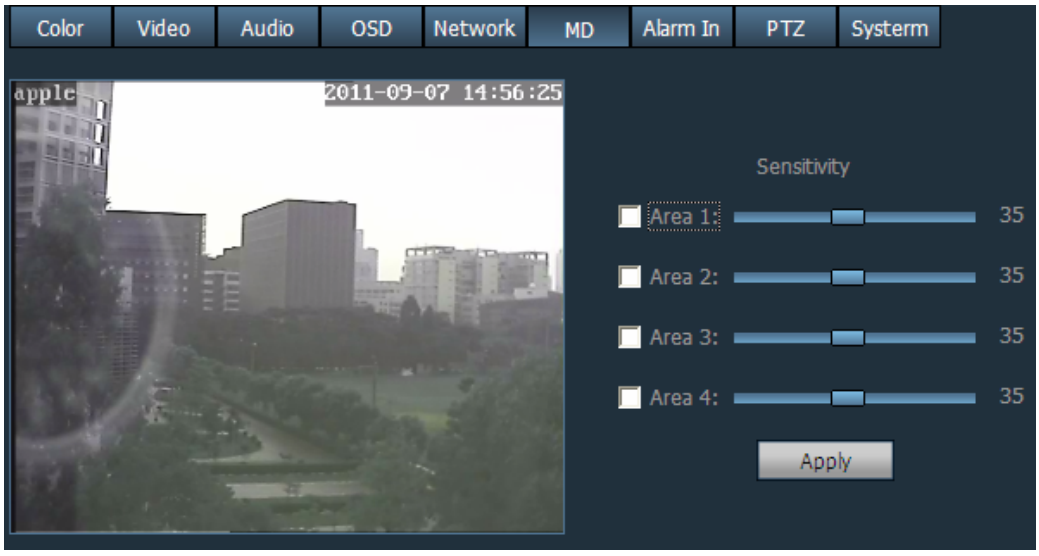

Figure 3.32

Select one window then you can see a green box with a number at living video. You can drag the box to any position that you want to monitor in the video.

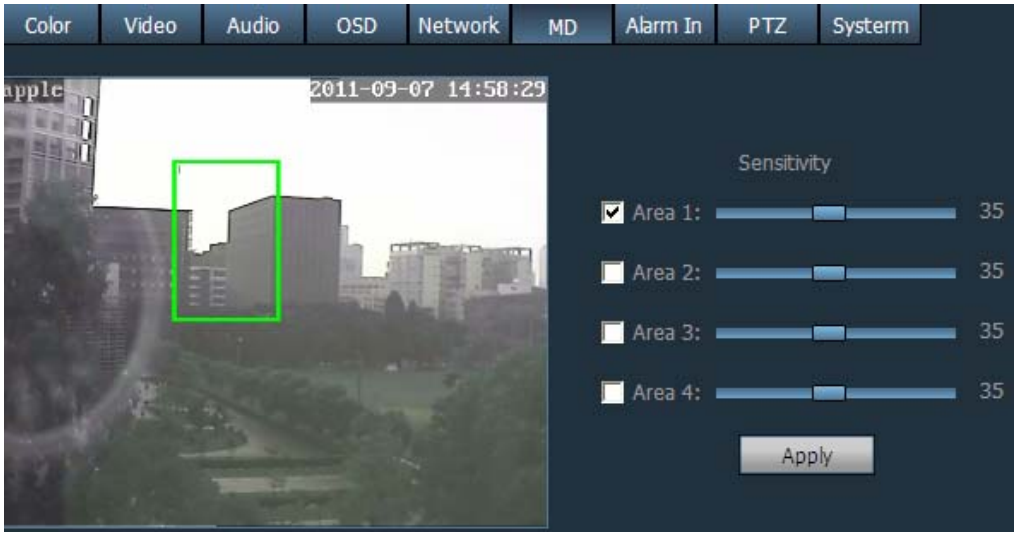

Figure 3.33

Move the mouse to the bottom right corner of the regional box .When the mouse pattern changes to “ ↘ ”, you can change the size of the detection area.

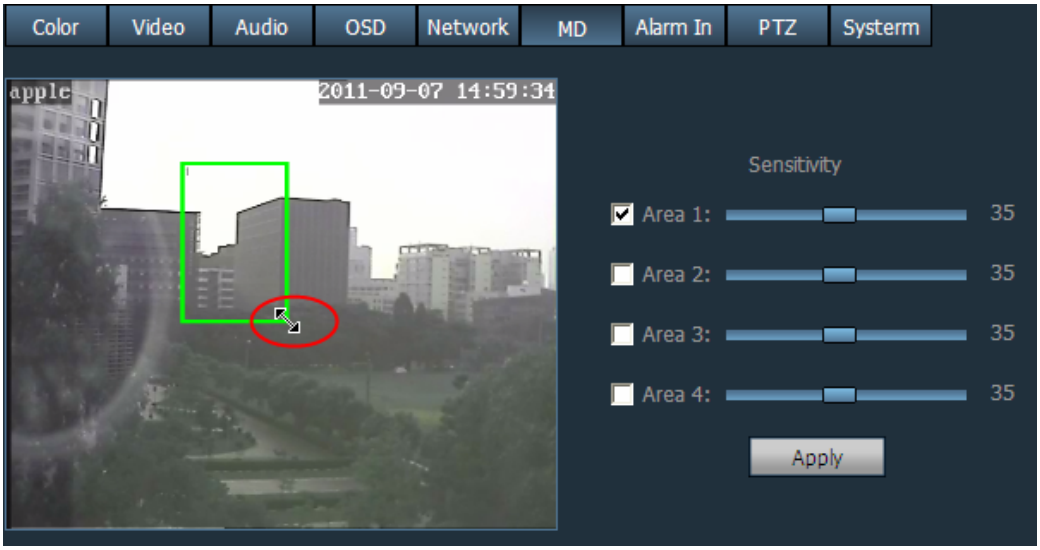

Figure 3.34

Then click apply and you can see a dialog box.

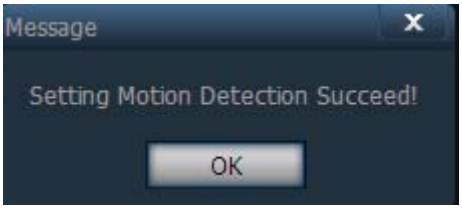

Figure 3.35

You should set alarm type next. Go to”Linkage alarm” and you can see the Alarm type, select Motion Detection.

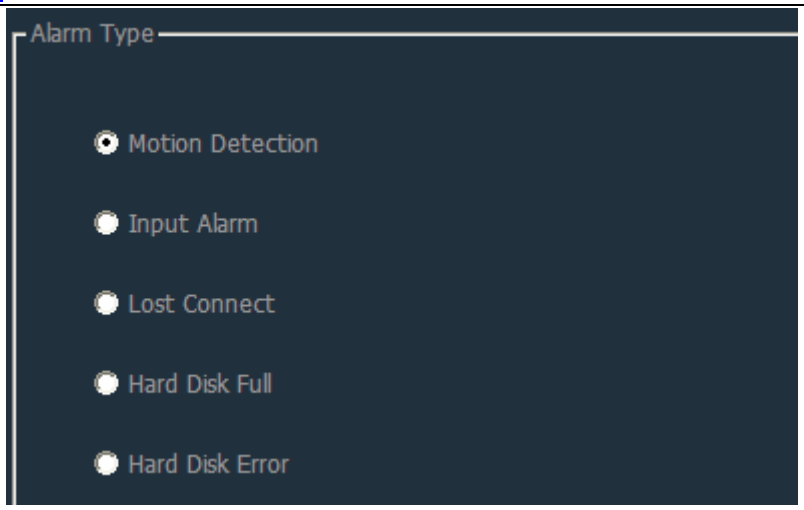

Figure 3.36

Note: 1 If you add the date&time to the video,don't put the alarm window on the time area or else the camera will alarm when the time change.

2 If you don't set the motion detection area,the camera will not alarm at any time.

3.4.7 Alarm in

If the camera supports external alarm, you need to configure the option.

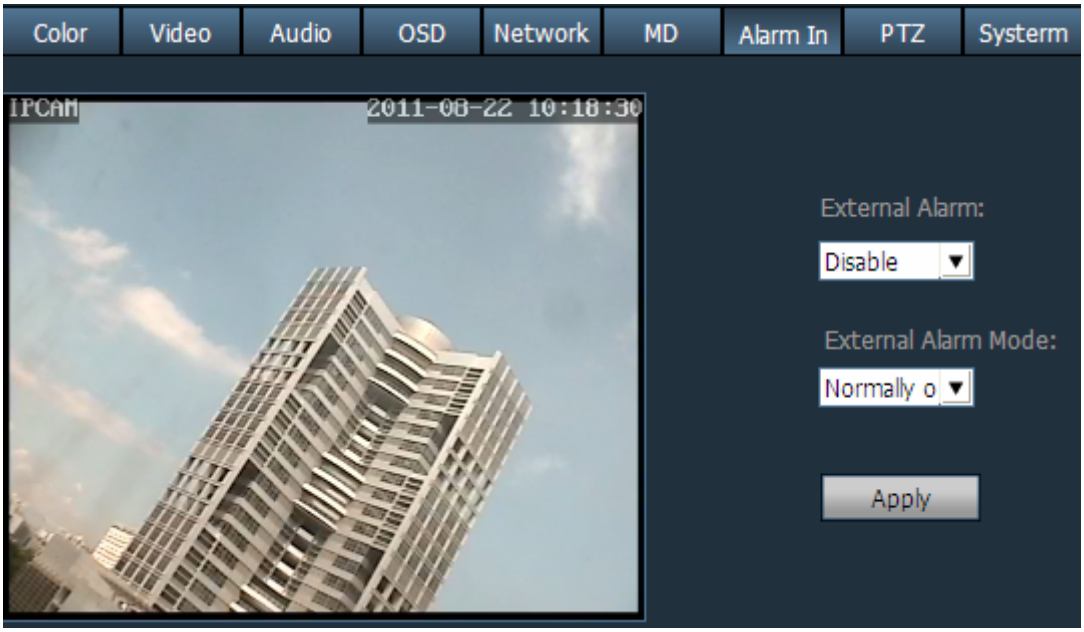

Figure 3.37

3.4.8 PTZ

You can operate the cradle head if you have set the right PTZ params. Make sure the camera has connected with the cradle head. Keep the following params the same as the cradle head

user manual.

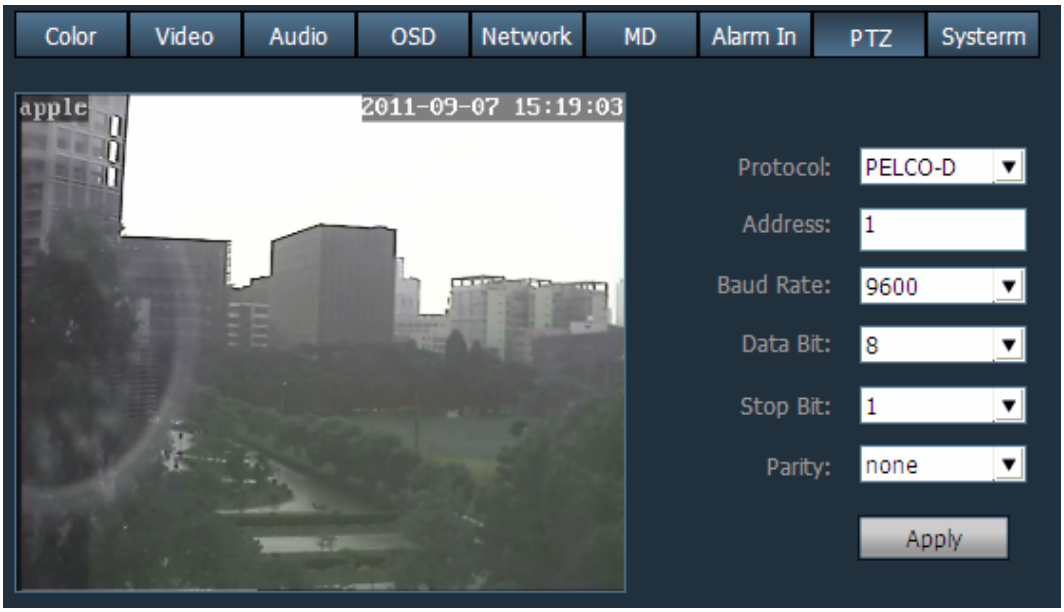

Figure 3.38

3.4.9 System

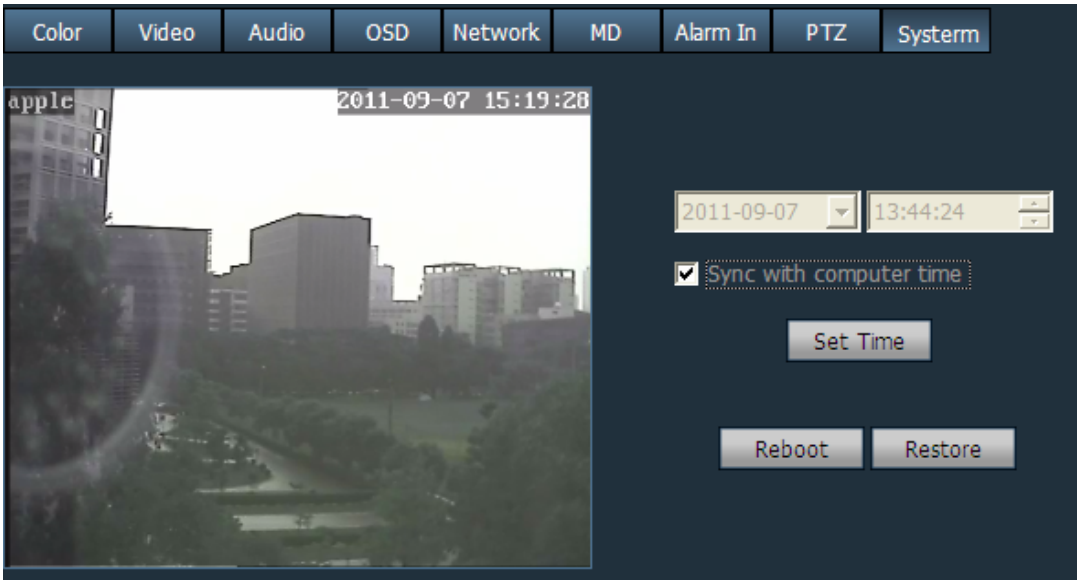

Figure 3.39

Alter the camera time: Adjust the time and date manually or select sync with PC time, then click Set Time.

Reboot: Select it and the camera will reboot.

Restore: Click it and the camera will restore the factory default.

3.5 Record Management

Configure Record Management and the camera you selected will start recording during the time you set.

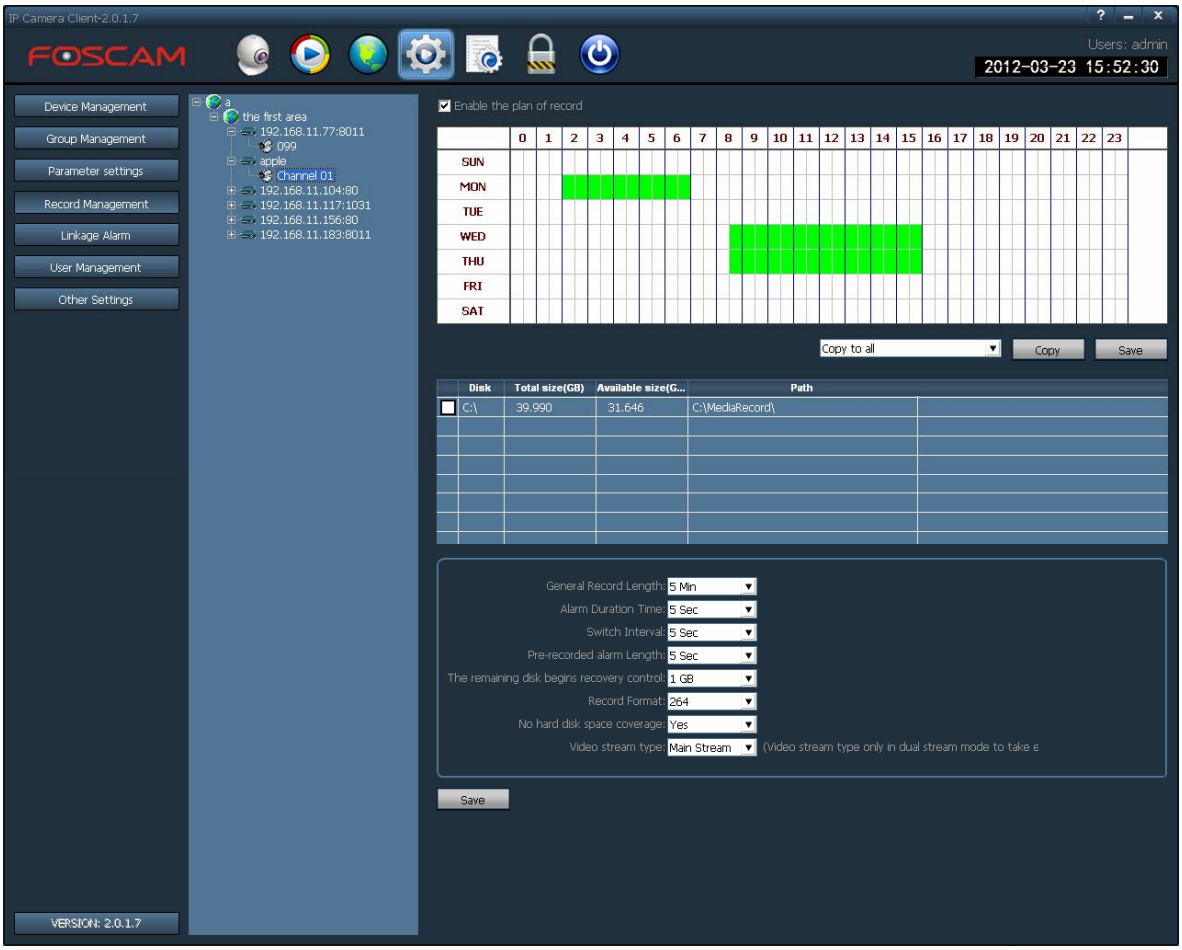

Figure 3.40

First you need enable the plan of record and then select the device channel.

Figure 3.41

Next set the time range for the recording.

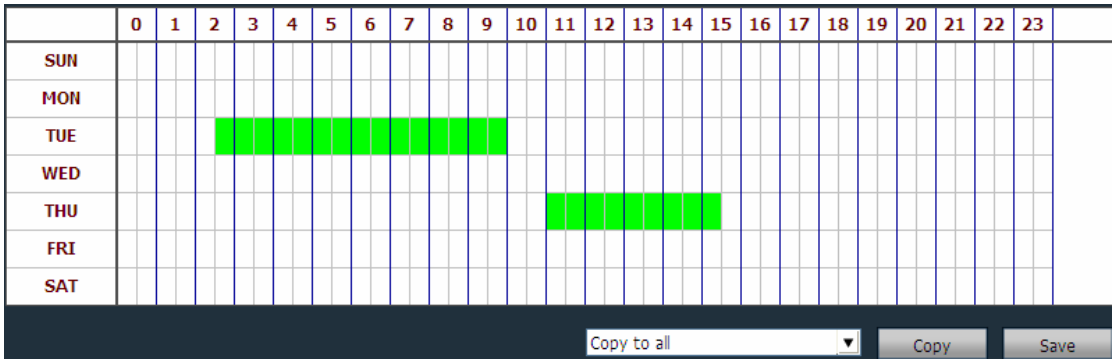

Figure 3.42

Click the mouse and drag it. Then you can see the green record time range. You can cancel the time range by the same way. Click save after finish settings.

Note: If you want all cameras start recording at the same time range, you only need set one time range and select copy, all cameras will record when record time is coming.

Third: Set the record storage path.

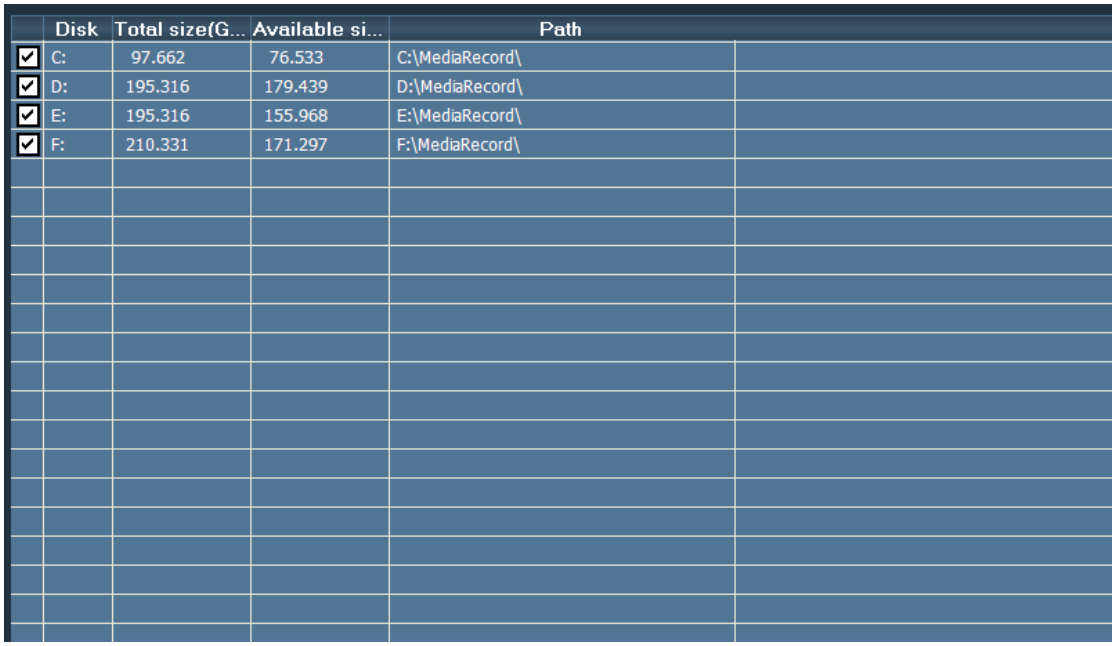

Figure 3.43

If you choose many disks as the storage path, the record file will be stored to the next disk automatically when the current remaining storage space is less than the space you set (the default space is 1G). If you select No hard disk cove" , when the total remaining storage space of all disks that you selected is less than the space you set, the new record file will cover the oldest file. (figure 3.38)

You can set 24 storage disks at most.

Finally set the length of the record file

The default length is 5 minutes. You can set the length between 1 and 60 minutes.

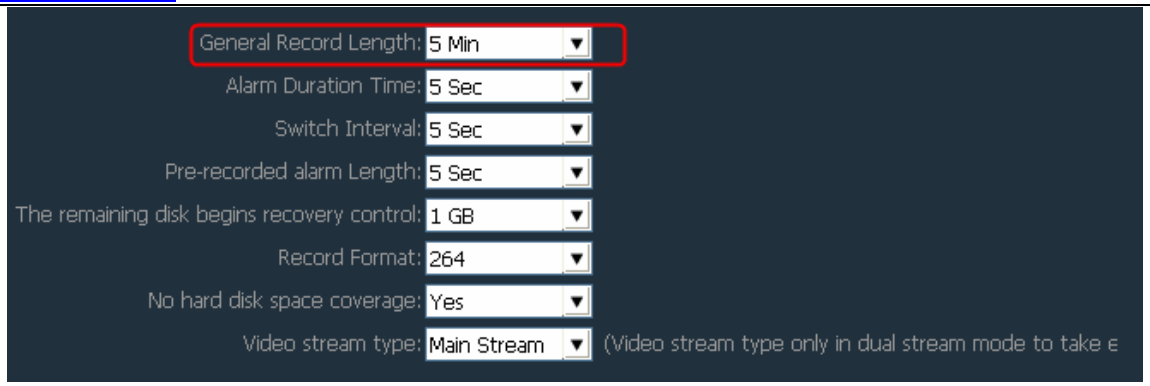
General Record Length: 5 Min
Alarm Duration Time: 5 Sec
Switch Interval: 5 Sec
Pre-recorded alarm Length: 5 Sec
The remaining disk begins recovery control: 1 GB
Record Format: 264
No hard disk space coverage: Yes
Video stream type: Main Stream
(Video stream type only in dual stream mode to take e

Figure 3.44

Click Save after finishing all settings.

3.6 Linkage alarm

There are five alarm types: Motion detection, Input alarm, Lost connect, Hard disk full, Hard disk error, select the suitable alarm type for yourself.

You can adopt four ways when alarm happens. There are four types: Popup video window, Electron map alarm, Linkage alarm and Sound alarm. You can select any one for Motion detection and input alarm. But you can only select sound alarm for other alarms.

If you select Electro map alarm, you need configure map firstly.

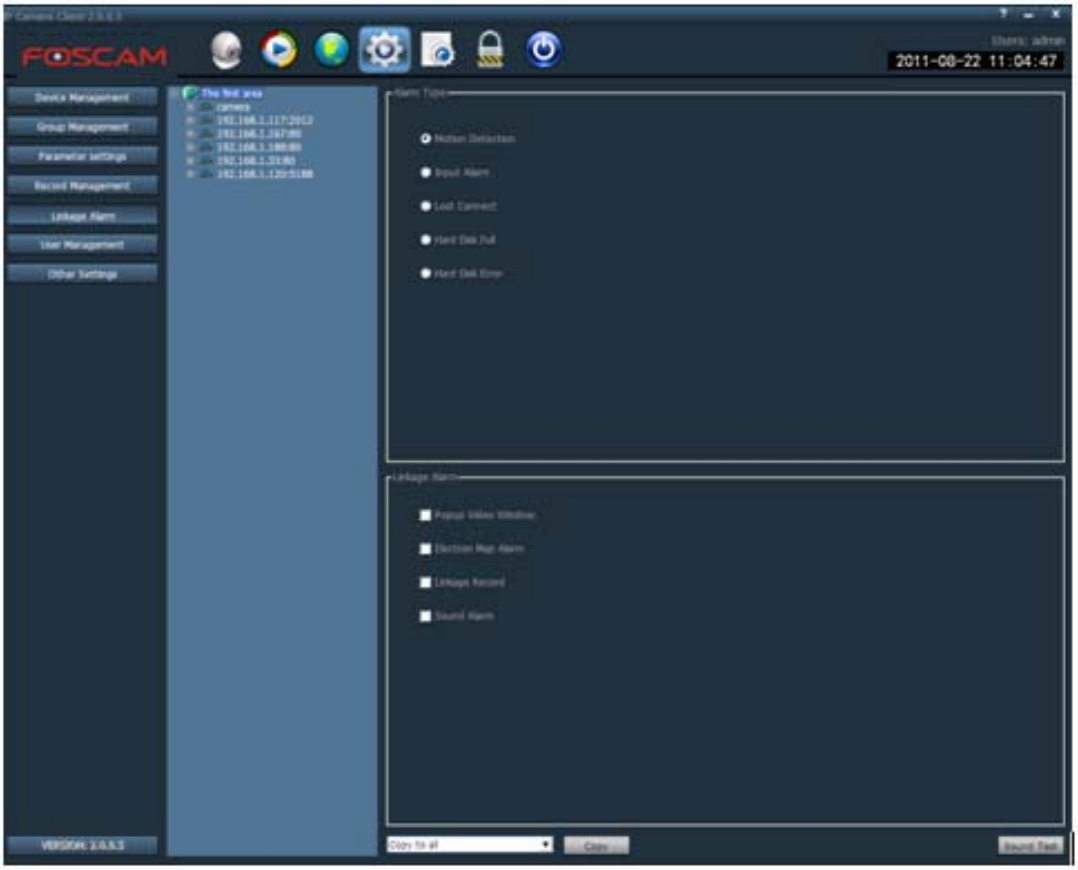

Figure 3.45

You can set alarm duration time, pre-recorded alarm length for one camera at Record Management page.

The default alarm duration time is 5 seconds, you can set it between 5 and 60 seconds.

The default pre-recorded alarm length is 5 seconds, you can set any time between 1and 15 seconds.

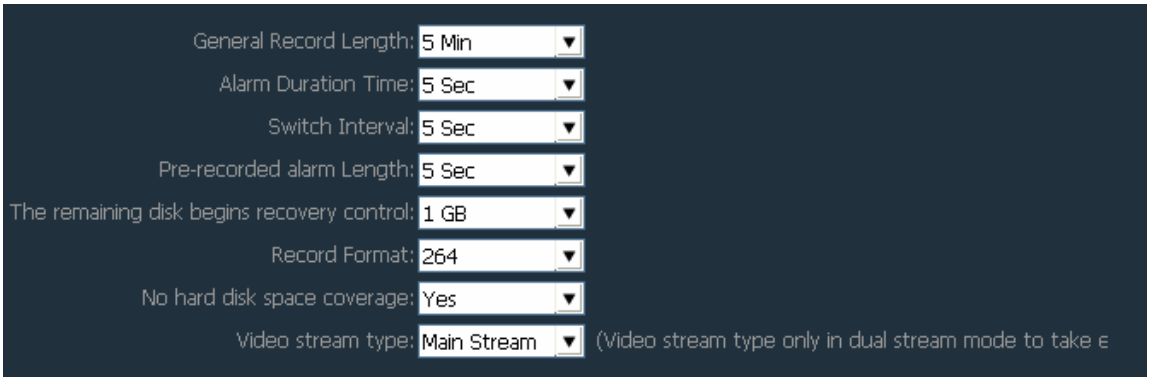
General Record Length: 5 Min
Alarm Duration Time: 5 Sec
Switch Interval: 5 Sec
Pre-recorded alarm Length: 5 Sec
The remaining disk begins recovery control: 1 GB
Record Format: 264
No hard disk space coverage: Yes
Video stream type: Main Stream
(Video stream type only in dual stream mode to take e

Figure 3.46

Note: 1 Back to the Preview window, and select the list tree mode, you can see the alarm icon before the IP address if you set alarm for the camera.

2 All linkage alarm will take effect after you set the alarm for the camera.

3 When one alarm has happened and another alarm happens again, the duration alarm time will last.

4 When the camera is operating the plan of record and during the time the alarm record happens, the client will stop the plan of record and start alarm record.

5 When the camera is operating the plan of record or alarm record and the manual record happens, the client will stop the plan of record and alarm record then the manual record starts.(You can start manual record by clicking the button at the preview page.

3.7 User management

The client has three-lever permissions: admin, user and guest. The admin user has the highest permissions, he can do anything. The guest has the lowest permissions. The default user name is admin, no password. After the administrator logged the client then he can add or alter or delete the other users.

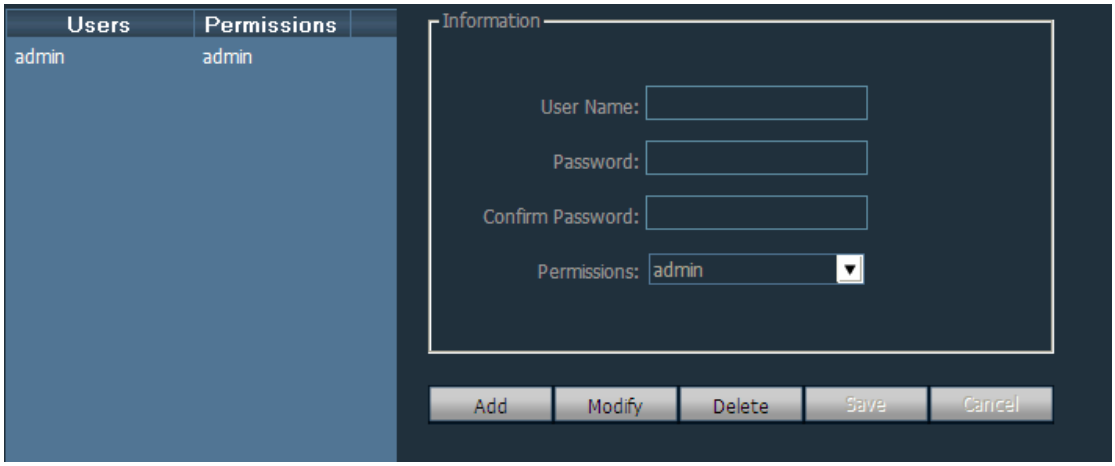

Figure 3.47

Add: Click it and you can see the following screen. Fill in the user name, password and permissions then click Save. You can see the added information.

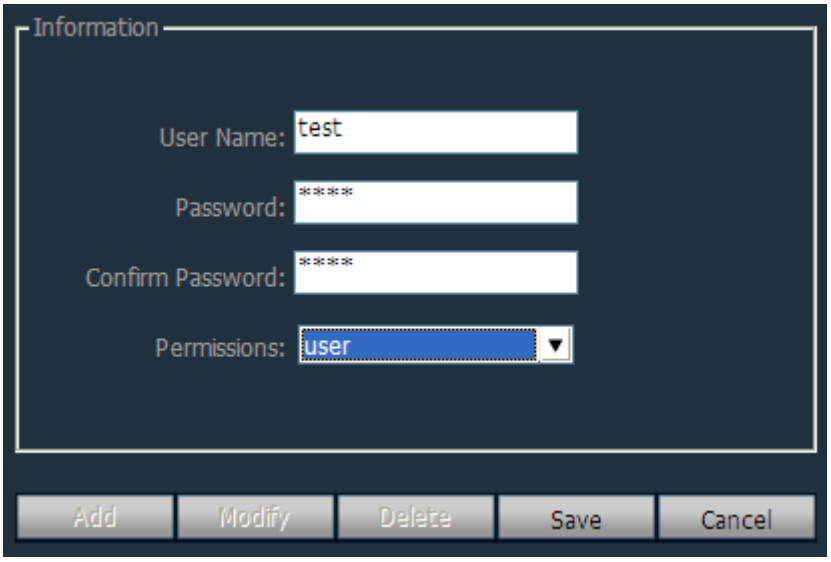

Figure 3.48

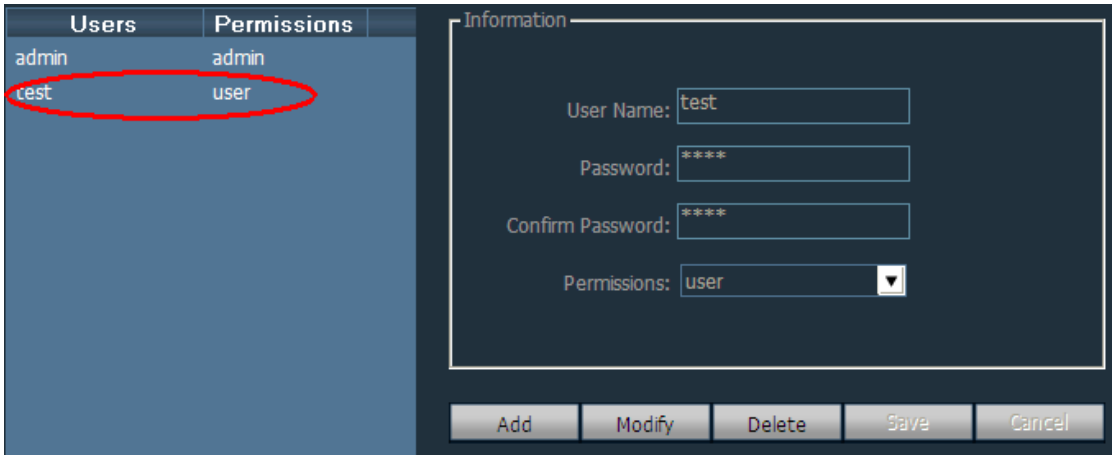

Figure 3.49

Modify: Select the user by click it at the left of the Information and then you can modify the password and permission.

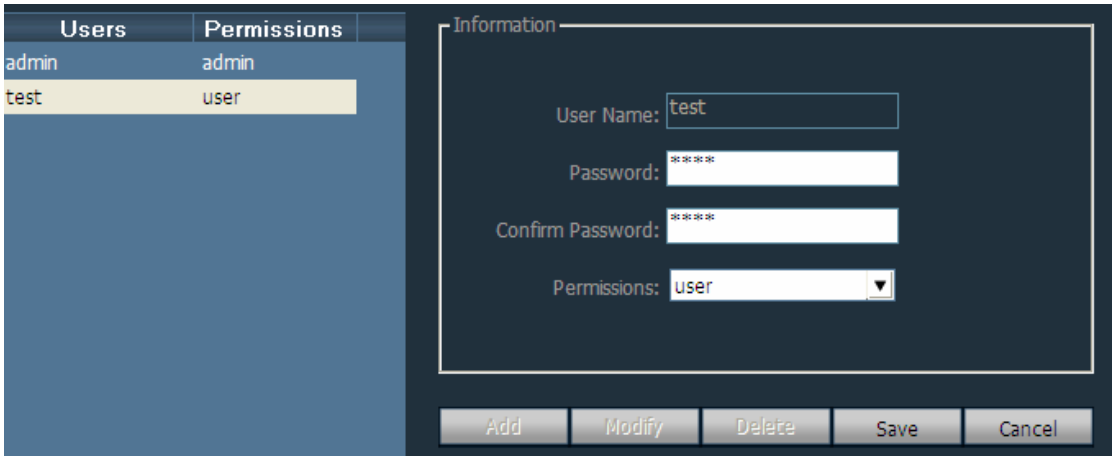

Figure 3.50

Delete: Delete one username and password.

You can see the user name after one person logged the client, such as the following screen:

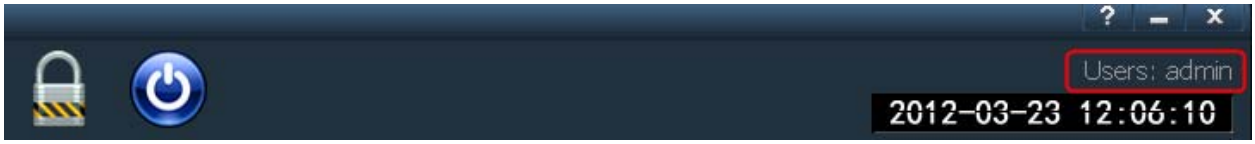

Figure 3.51

3.8 Other settings

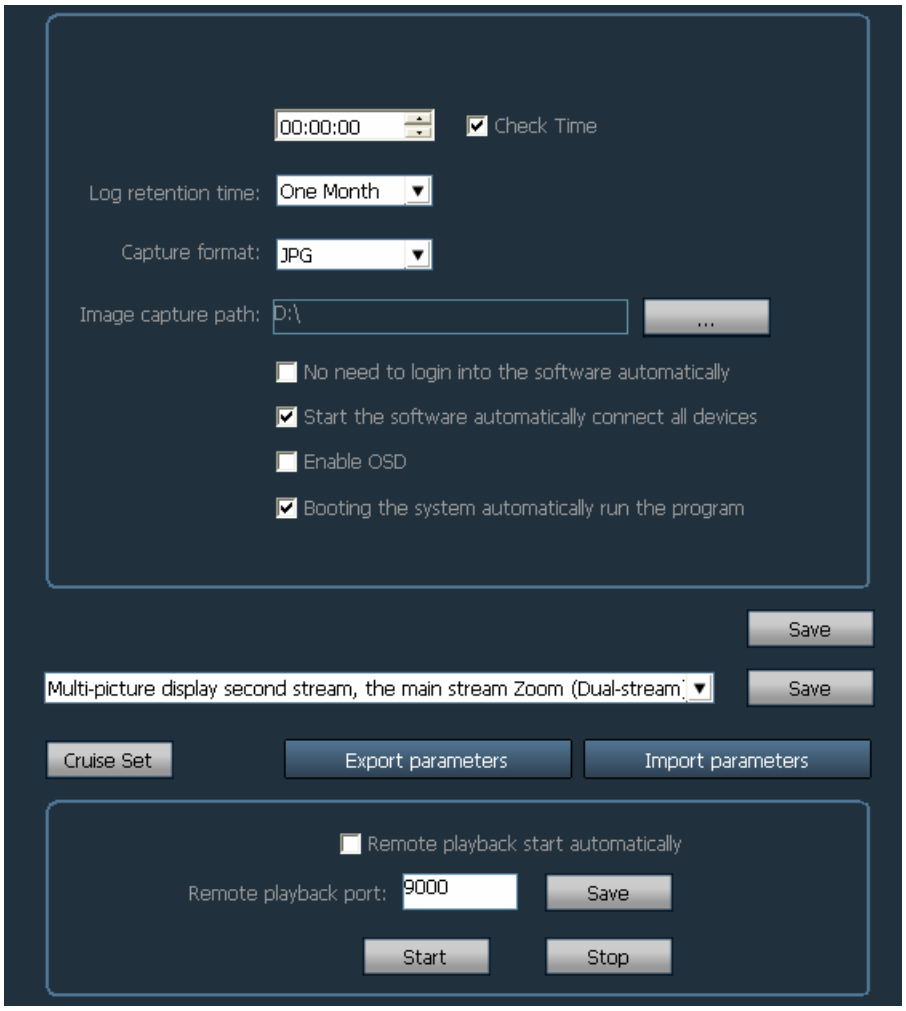

Figure 3.52

Check time: Fill in one time. Select Check time and all cameras that the client connected with will sync with the time.
Log retention time: There are four modes: one month, two months, three months, six months.
Capture format: The picture format of the client captured. There are two modes: JPG and BMP.
Image capture path: The picture storage path of the client captured.
Select the checkbox before **No need to login the software automatically**, when you open the computer, you need to enter the account and password to run the software. Select the checkbox before **Start the software automatically connect all devic**e, every time the software run, it will connect the device you configured automatically.
Enable OSD: Select it, and the live view window will display the camera alias and the time.
Booting the system automatically run the program: Select it and when you open the computer, the software will run automatically.

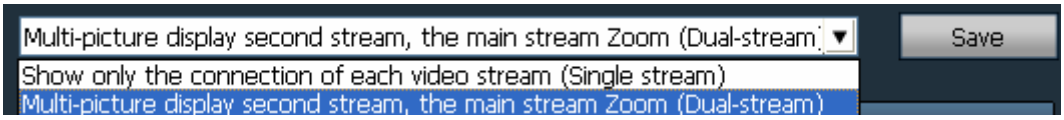
Multi-picture display second stream, the main stream Zoom (Dual-stream)
Save
Show only the connection of each video stream (Single stream)
Multi-picture display second stream, the main stream Zoom (Dual-stream)

Figure 3.53

Multi-picture display second stream, the main stream Zoom(Dual-stream): When you select 1or 4 cameras in the live view window, all camera will use the main stream, when you select 6 or 8 cameras in the live view window, the first camera will use the main stream and other cameras will use second stream. When you double click one camera's live view window, the camera will use main stream.

Show only the connection of each video stream: All connected cameras will use the second stream.

Figure 3.54

Click Cruise Set and you will see the following screen.

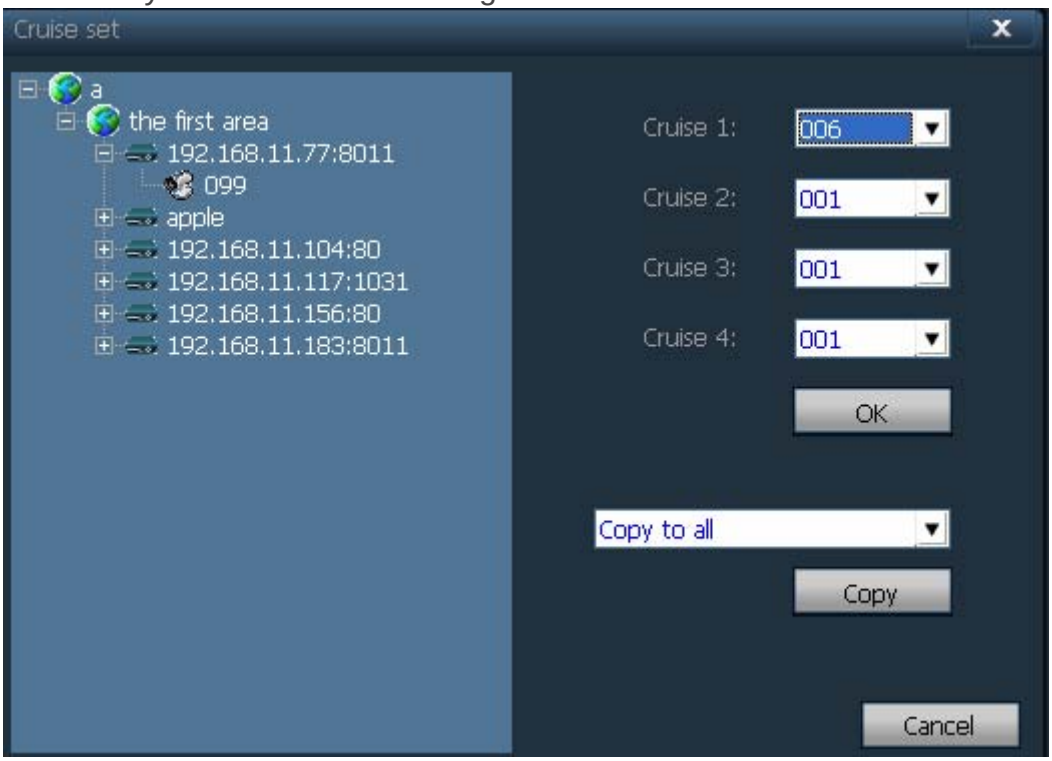

Figure 3.55

Select one camera and set the Cruise. For example, select the 006 preset position as Cruise 1, back to the live view window, select one connected camera view window, and click CRUISE, when you click the cruise 1, the camera will back to 006 preset position.

Click OK to save all settings. Here you can choose Copy to all and copy the settings to all cameras.

Click Export parameters and export all settings to one file.

Click Import parameters and import one client's parameters to another client. The version of two clients must be same.

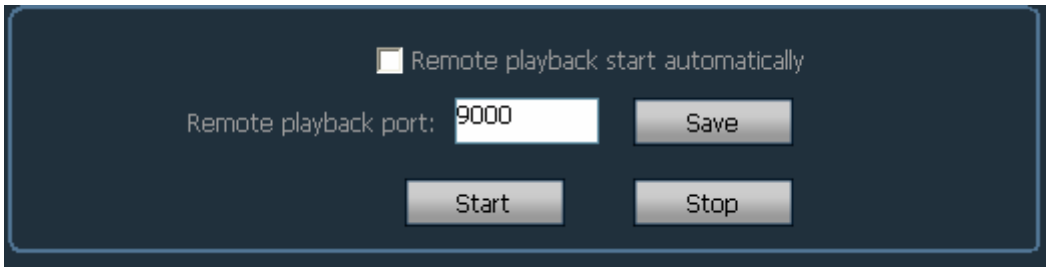

Figure 3.56

Here you can alter the remote playback port number, click save after settings..
When you click Start, the client will start playback.
Click Save after finishing all settings.

4 Other settings about the client

4.1 Playback

Click the icon and go to the Playback page.

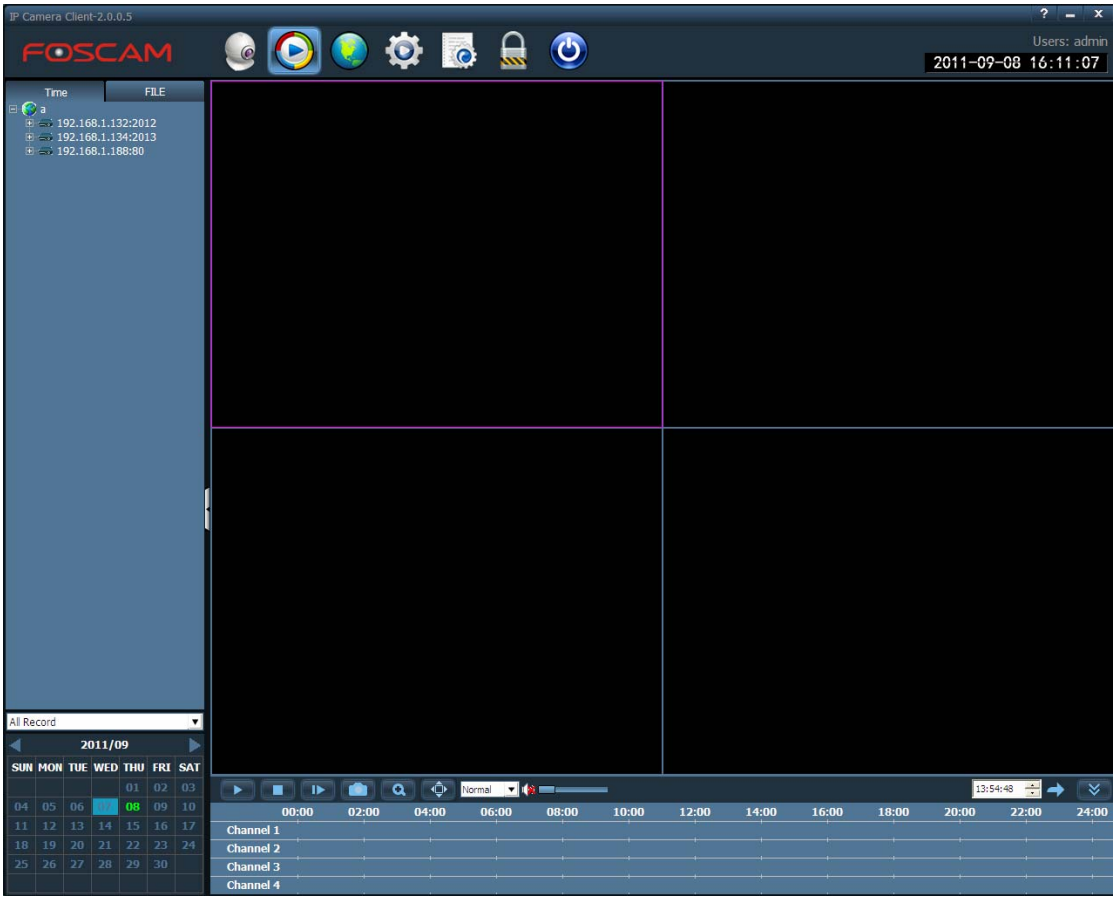

Figure 4.1

: Play the searched records.

: Stop playing.

: Single frame .Click it and the video will play one frame every time. Click the button again, the video will play the next frame.

Snap Click the button, the living view will be stored as one picture.

Magnifier. Click the button, and then drag the mouse in one view window, the corresponding region will be amplified.

Full-screen, Click it and the client window will be full-screen. If you want to make one view window full-screen, you need double click on the view window. Press ESC and exit full-screen.



: The speed of play.

: Volume. You can open or close the volume when playback one record.

Jump button. Select one time, and click the icon during the play, the view will jump to the set time and play.

4.1.1 Searching the records by time

You can do as the following steps:

1 Select the record type and searching time.

The record type has four modes: All record, Manual, Alarm and Plan.

Figure 4.2

2 Select one view window by clicking it. Select one channel by double click it.

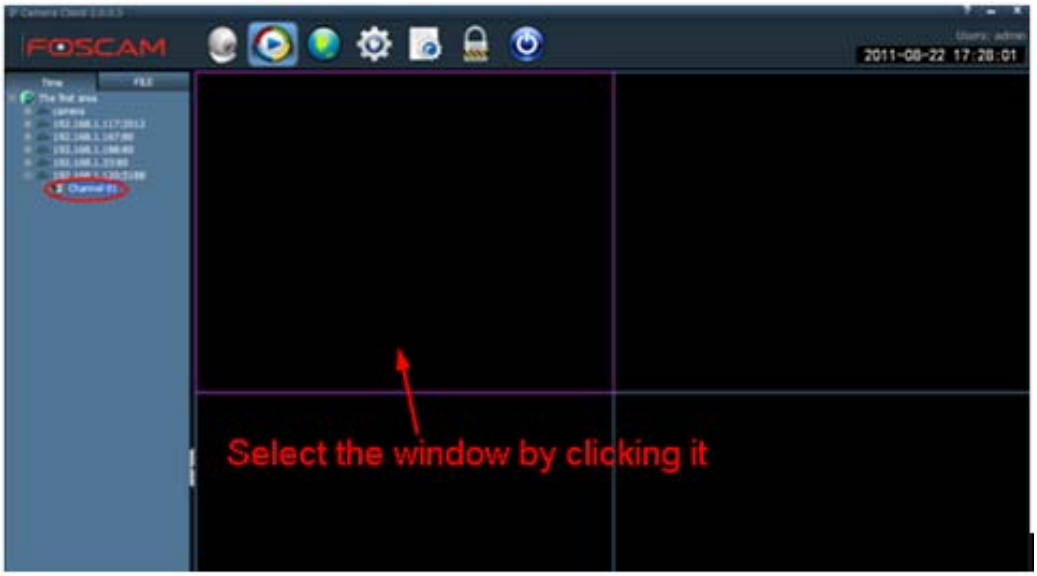

Figure 4.3

3 The time panel will show the records that satisfied the condition.

the plan of record: the alarm record: manual record:

Figure 4.4

4 Double click the channel and play the records.

4.1.2 Searching the records by file

Select the file mode first and then search the records.

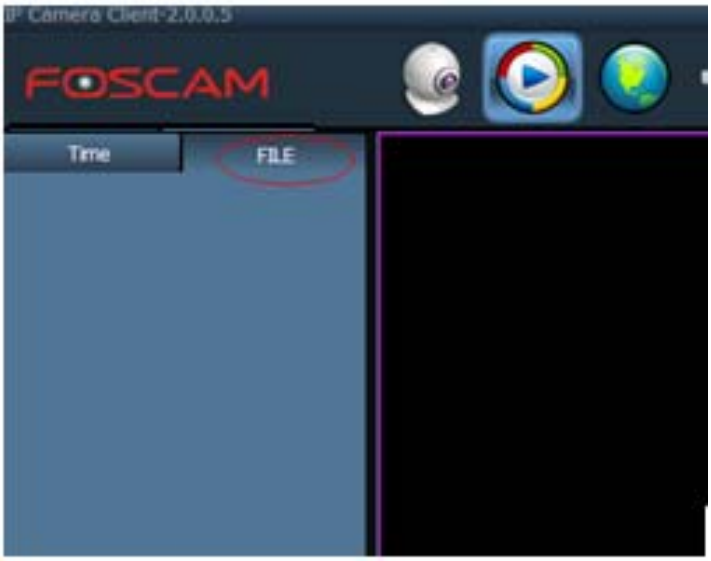

Figure 4.5

You can do as the following steps:

1 Select the file type and channel.

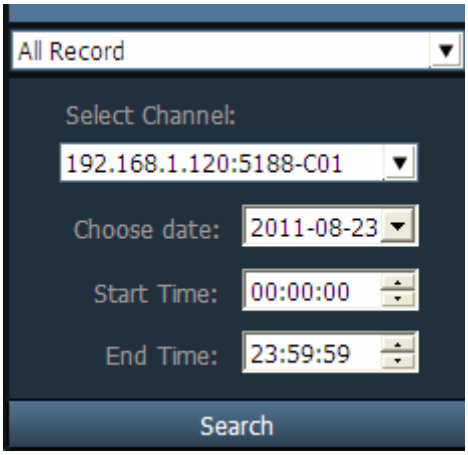

Figure 4.6

2 Fill in the date and time, then click search. You can see some files that matching the search conditions.

Figure 4.7

3 Choose one window and then double click the file name, the file will play.

Note: You can playback one record file at four windows at the same time.

4.2 EMap

If you want to use the Electron Map Alarm, you need to configure EMap first.

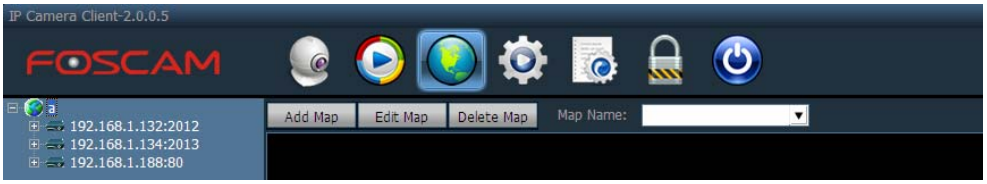

Figure 4.8

4.2.1 Add the map

Click the button “Add map”, it will pop up a dialog box.

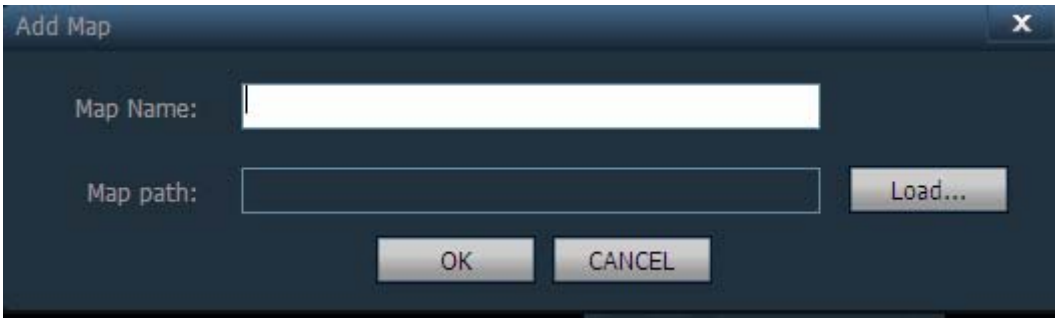

Figure 4.9

Enter the map name and load the map, then click OK. You can see the map at the client. Such as the following picture:

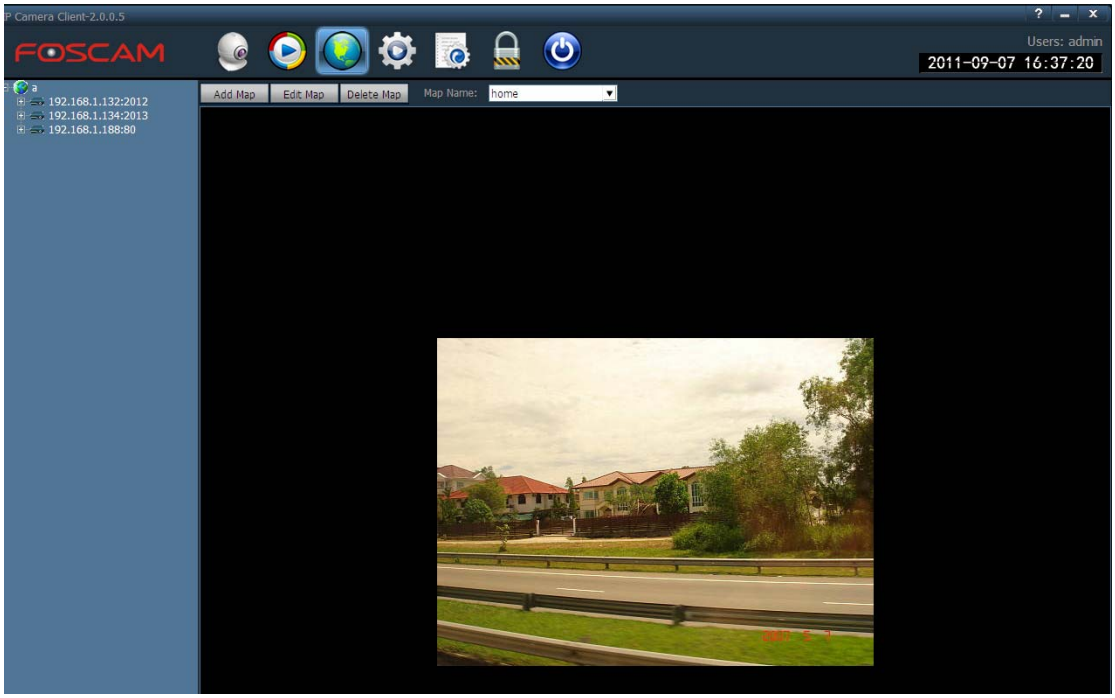

Figure 4.10

4.2.2 Edit the map

Click the button “Edit map” and then drag one device channel to the map. You can see the icon in the map. Double click the icon , you can see the living view of the device. Click Stop editing after finishing editing.

If you select “Electron Map Alarm” at “Config—Linkage Alarm” page, the icon will blink when the device alarm.

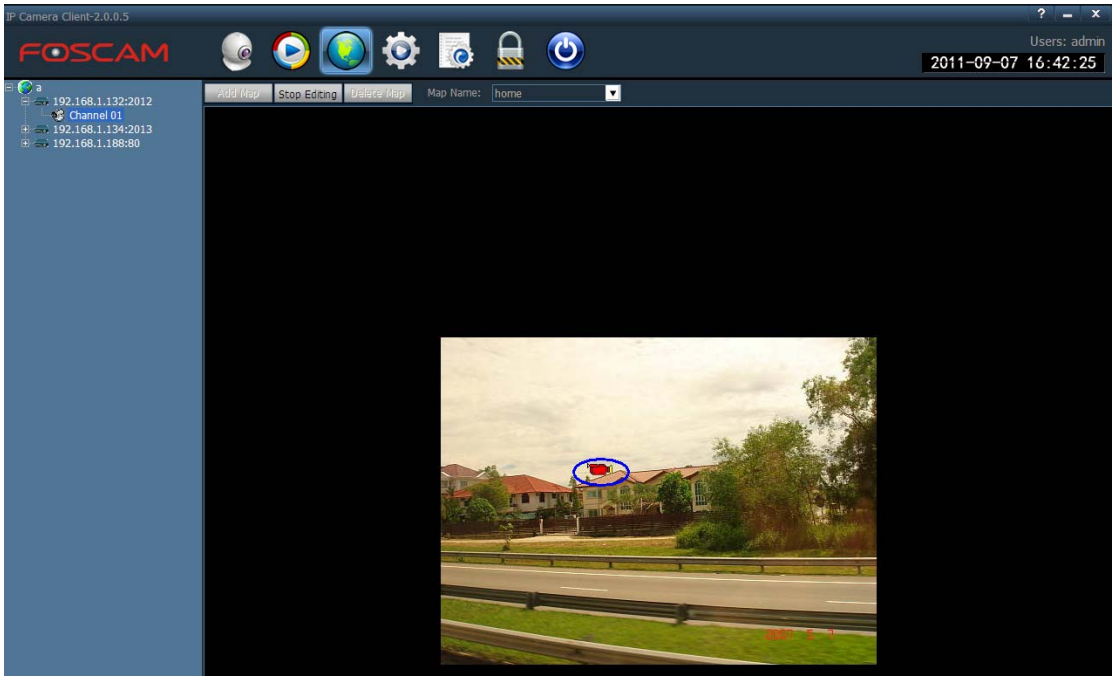

Figure 4.11

Note: You should choose “Electro Map Alarm” in “Config—Linkage Alarm” page, or else when the device alarm, the icon can not blink.

4.3 Logs

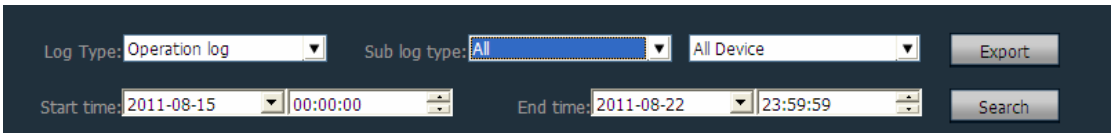

Figure 4.12

There are four kinds of logs: All logs, System log, Operation log and Alarm log.

All logs: All information about the client, such as alarm information and login/exit information, operation information and so on.

System log: Keep track of the login/exit information and other user matching information.

Operation log: Keep track of the operation that users have done.

Alarm log: Keep track of all alarm information.

After you select the main log type, you can choose a detail log type.

Sub log type: There are nine kinds: All, User logs, Connection logs, Recording logs, Capture logs, Talk logs, Listen logs, Group logs and Data logs.

The steps of searching logs:

1 Select the Log type and Sub log type.

2 Select the searched device.

3 Fill the start and end time.

4 Click Search

You can see the searching result, such as the following screen:

Figure 4.13

If you want to backup the searching result, click Export and set the storage path.

Note: 1 You must search logs first and then backup it.

2 The format of the export logs is .xls

3 Each excel file can save 5000 pieces of logs, if the searching result contains more than 5000, the client will save the other logs to another excel file automatically.

4.4 Logout user

When you leave your PC for a while, you had better logout the client for Illegal intrusion. When you come back, you need enter the password again.

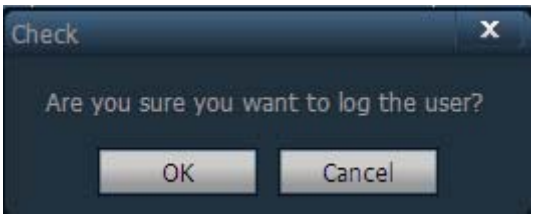

Figure 4.14

4.5 Exit

When you exit the client, you need enter the password again.

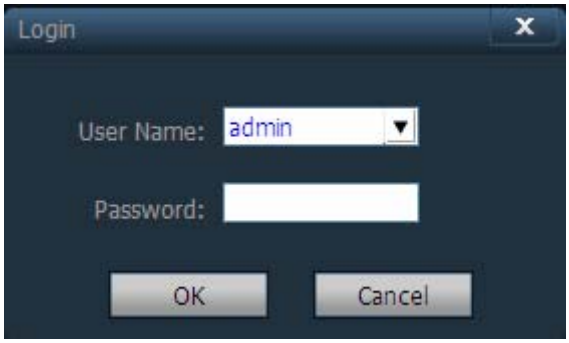

Figure 4.15

Note: Only admin users can exit the client, other users cannot exit it.

5 OBTAINING TECHNICAL SUPPORT

While we hope your experience with the client is enjoyable and easy to use, you may experience some issues or have questions that this User Manual has not answered. Please contact your reseller and ask for help first, If our reseller cannot provide service, pls contact our service department: tech@foscam.com .